




Circuit Board Replacement Instructions

for Saker Plus/Evanescence Plus/ Evanescence Tab-Tension/Kestrel Stage Series

For technical support or further assistance, call 877-511-1211 x604

ATTENTION: Please make sure the version number and the Voltage of the circuit board matches the version number and the Voltage of the screen. EliteProAV™ does not recommend making unnecessary adjustments to the screen, as **improper adjustments will damage** the unit and **void your warranty**.

1. Open the control box and remove the cover. Press in the release tabs on both sides and pull to remove.

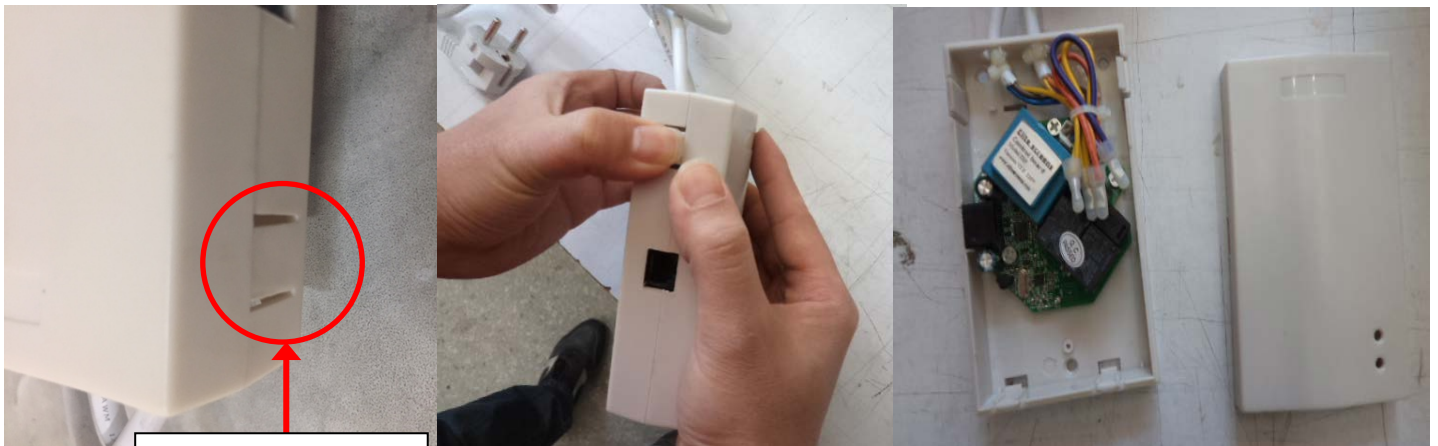


Release tabs.

2. Press in the clips on the white terminals, then carefully pull out to remove the two terminals.




Two white terminals.

3. Remove the three screws that secure the circuit board with a Phillips head screwdriver. Set the screws aside to later secure the new circuit board.

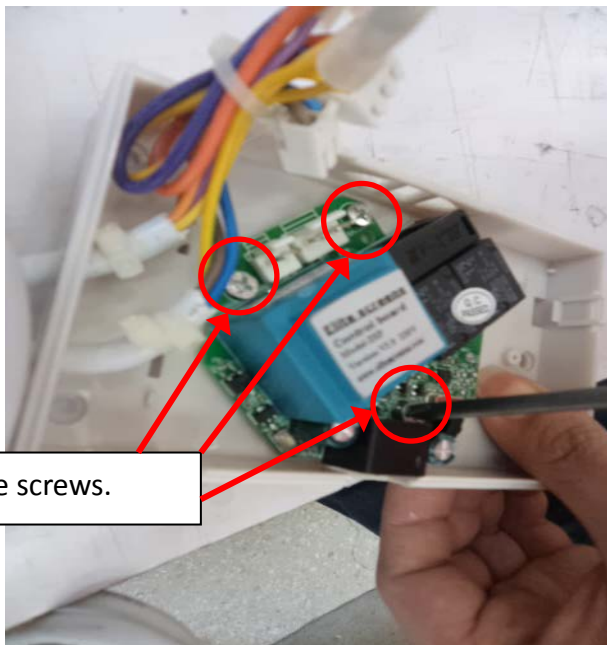


Three screws.

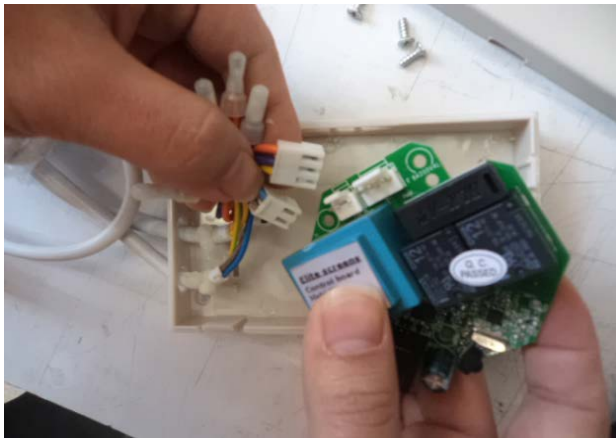

Finished disassembly.

4. Utilize the saved screws to secure the new circuit board in same location of the previous.

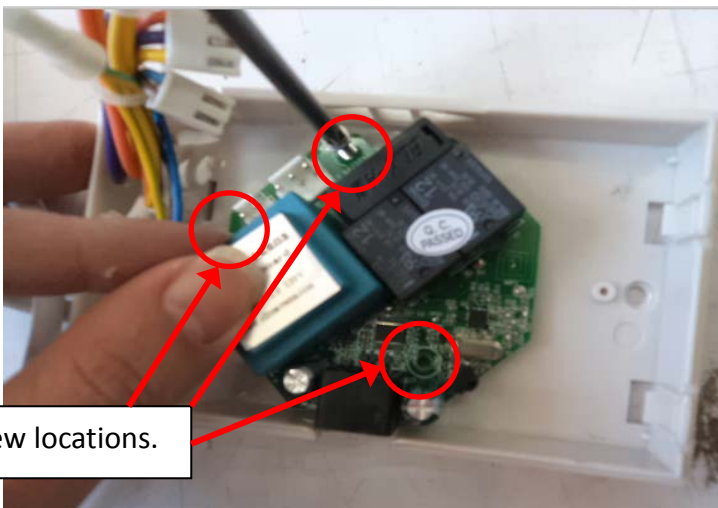

Three screw locations.

5. Insert the two sets of white terminals into the new circuit board.



Two white terminals.

6. Replace circuit board cover. Be sure to listen for a "click" to insure the cover is secure.



Finished assembly.

For a local EliteProAV™ contact or Technical Support, please visit

www.eliteproav.com