



## **Radio Frequency Remote Synchronization Instructions**

If your RF remote control does not work with your screen, try the following to get it synced. See below for instructions.

***Make sure new batteries or working batteries are in your RF remote control before proceeding with the steps.***

### **Synchronization Procedure**

**Step 1.** Unplug your screen from the power outlet.

**Step 2.** Plug the screen back to the power outlet and at the same time press and hold the “up” button on the RF remote within 3 seconds until the LED light flashes.



**Step 3.** You will see the screen go up and down slightly. This means the RF remote is now synchronized with the screen.

**If your RF remote was unable to synchronize to the screen, repeat the above steps.**

For Technical support or an Elite Screens contact in your area, visit  
**[www.elitescreens.com](http://www.elitescreens.com)**