



CineTension2/Home2 Series Limit Switch adjustment instructions

Caution: The screen's **Top Black Drop** is already set to its maximum drop distance. There is **NO** extra black top drop in the roller. Attempting to increase the drop will damage the motor and **VOID** your warranty with Elite Screens. **DO NOT** use these instructions to try and get more out of your standard black masking drop. Please contact Elite Screens before making any adjustments.


1. Allen Wrench



5/32" Allen Wrench

Fig. 1

2. Limit Adjustment Instructions

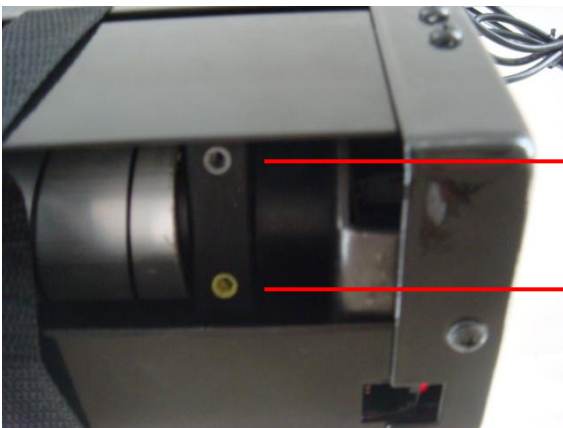

UP adjustment switch

DOWN adjustment switch

Fig. 2

(Note: When turning the limit switches, bear in mind that a full-circle turn in either direction will create a one inch adjustment)

3. Adjusting Retraction Position (shown in Fig. 3 – Fig. 7)



Fig. 3

If the screen will not retract completely (as shown in Fig. 3) use the following steps.



Fig. 4

Use remote to retract screen as much as possible

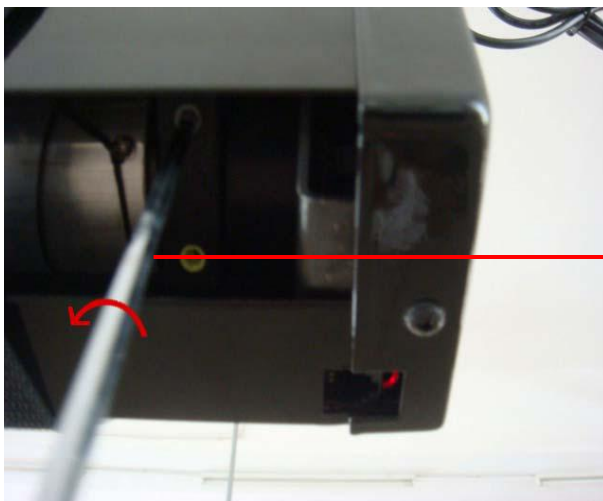


Fig. 5

Use your allen wrench to turn the UP switch counter-clockwise



Fig. 6

When you turn the UP switch, the screen will retract correspondingly. Stop rotating the switch once the weight bar lines up with the casing. (Warning: If you continue to rotate the switch once the weight bar fits flush with the casing, the screen will attempt to retract further, causing damage to the unit. DO NOT over turn the switch.)


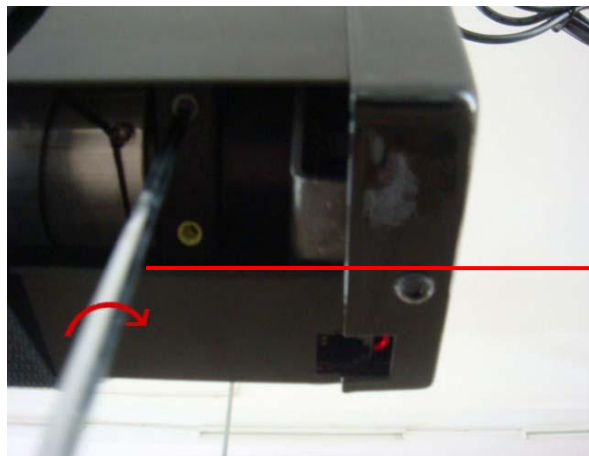


Fig. 7

If the screen retracts too far, just rotate the UP adjustment switch 2-3 turns clockwise and the screen will lower.

4. Adjusting Top Black Masking (shown in Fig. 8-12)

Note: All electric screens come with standard top black masking and they cannot be dropped further. DO NOT use these instructions to try to get more out of your standard black masking drop. Use these instructions only if you have decreased the amount of your black masking and need to increase it back.

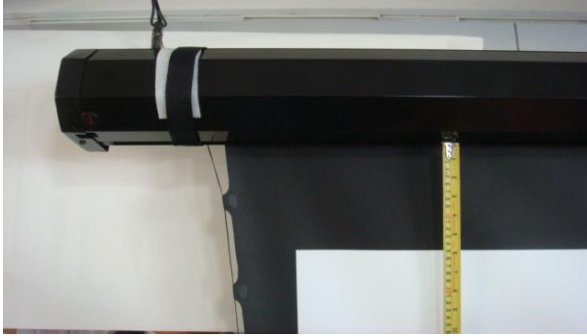


 
If you need to decrease the amount of top black masking, refer to the following steps.

Fig. 8



User your remote control to fully lower the screen.

Fig. 9

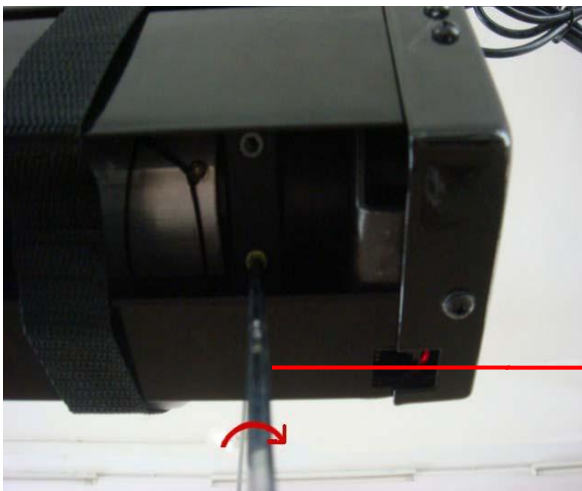

Use your allen wrench to turn the DOWN switch clockwise.

Fig. 10



Fig. 11

When you turn the DOWN switch, the screen will raise correspondingly. Stop turning the switch once the screen reaches the desired position. (Warning: If you over-turn the switch, the screen will lower completely and damage the unit.)

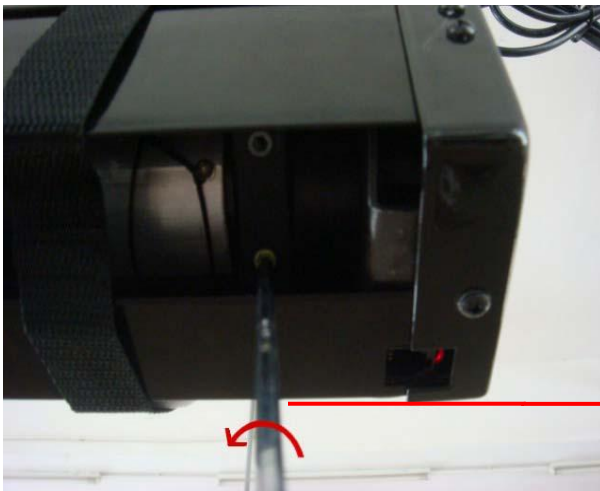


Fig. 12

If the screen raises to high, simply rotate the DOWN adjustment switch counter-clockwise, the screen will retract into its casing. (Note: Please avoid over-turning the switch.)

Note: As a rule, Elite Screens does not recommend making unnecessary adjustments to the screen, as improper adjustments will damage the unit.