




# YARD MASTER SPORT

*Ultra-Light Tripod/Wall Hanging Indoor/Outdoor Projection Screen*  
User's Guide


Thank you for choosing the *Yard Master Sport* portable projection screen! Please read this user guide before utilizing the screen. Correct usage and maintenance will ensure a long product life.

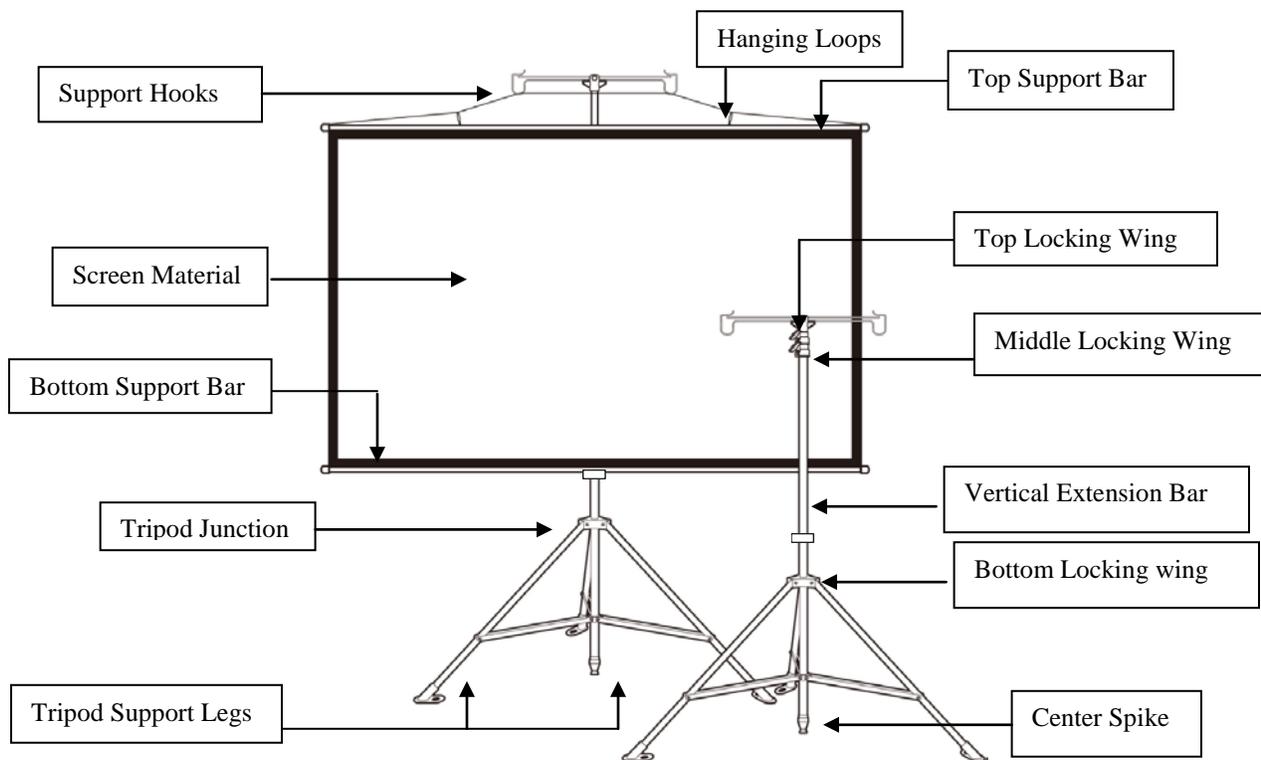

## Care & Use Instructions

- ◆ Dust, dirt and scratches on the projection surface will affect the picture quality, please take note of the points below to prevent that from occurring:
  1. Do not touch the projection surface with your hands
  2. Do not write or draw on the projection surface
  3. Do not use fingers or sharp objects to point on the projection surface; this will damage the screen material.
  4. Use a soft-damp cloth to clean the projection surface; do not use chemical cleaning agents or alcohol.
  5. Use clean water when dampening the cleaning cloth and do not rub against the material to clean it.
- ◆ After using the screen, disassemble it and store it in the carrying bag provided.
- ◆ To avoid damage and injury, the screen should only be operated by adults.

### What's included?
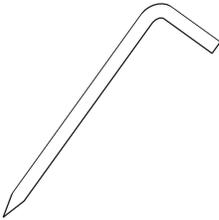
| Screen Material (rolled)  | Tripod Stand  | Carrying bag   | Stakes x3   |
|---|---|--|---|
|  |  |  |  |


## Setting up the Yard Master Sport Projection Screen

### A. Tripod Stand set up

1. Place the **tripod stand** in an upright position with the legs slightly above the ground.
2. Turn the bottom **locking-wing** counter-clockwise to extend the tripod legs and set it on the floor.


*Turn the locking-wing clockwise to lock the position.*

3. Pull out the **screen support hooks** unit they are fully extended. Once fully extended, the hooks swing downward 90° to the left and right to form the screen attachment

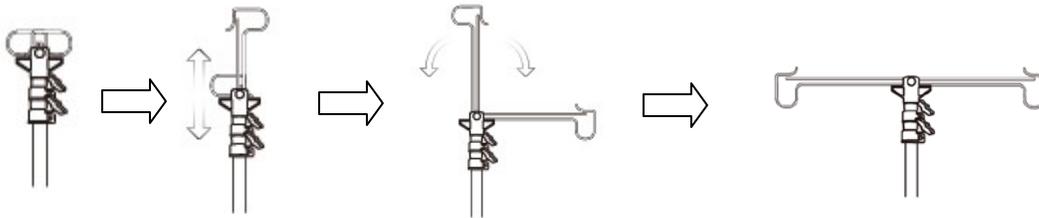


### B. Attaching the Projection Screen Material

4. Unroll the **screen material** on a clean surface. Attach the screen using the rope to the **Screen Support Hooks**.

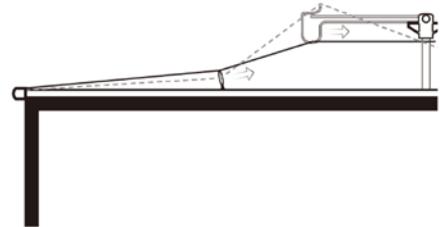


*Note: The back of the screen has markers to indicate the position of the hanging loops. It is important to place them there to avoid the screen from tilting.*

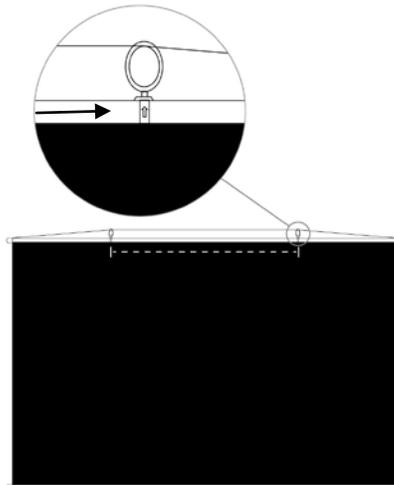


5. Turn the middle and top locking-wings counter clockwise to raise the extension support bars to the desired height. **Turn the locking-wing clockwise to lock the position.**

6. Once the screen material is set, use the **C-shape cradle** to lock the screen in position. **Fig.01**

**Note: The C-shape cradle can move up and down to lock the material to the adjusted height.**

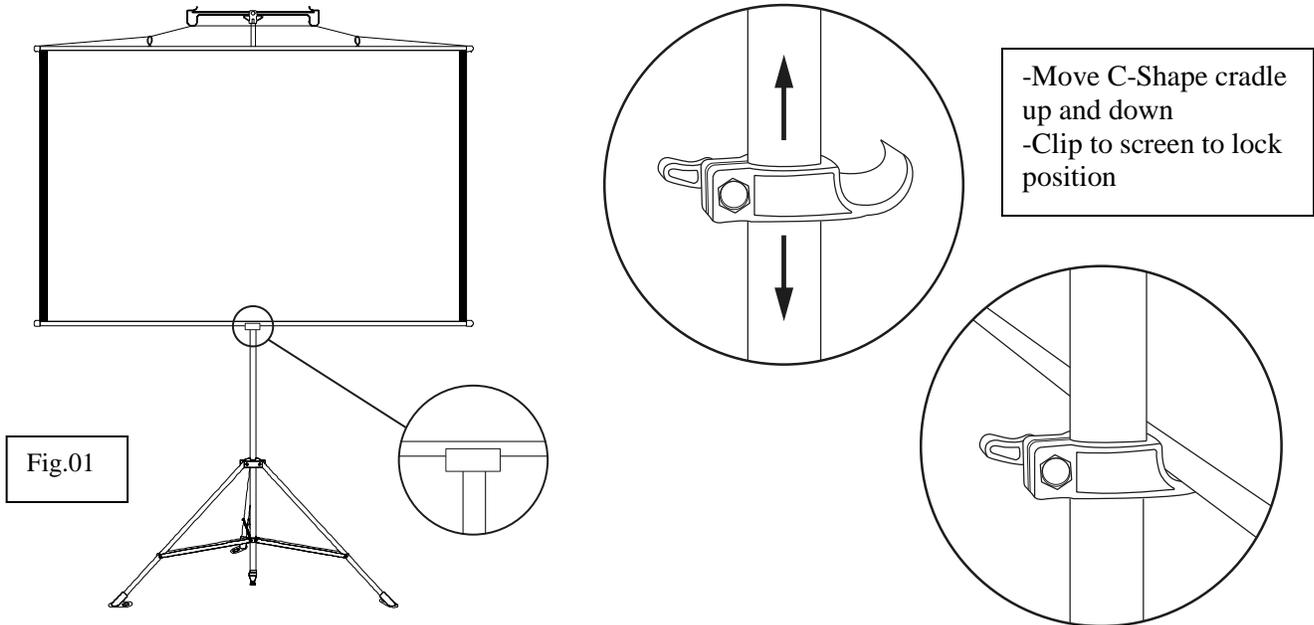


7. If the screen is adjusted to a lower height or **C-Shape cradle** will not be used, rotate to the side as shown on **Fig.02** in order to move it away from the screen.

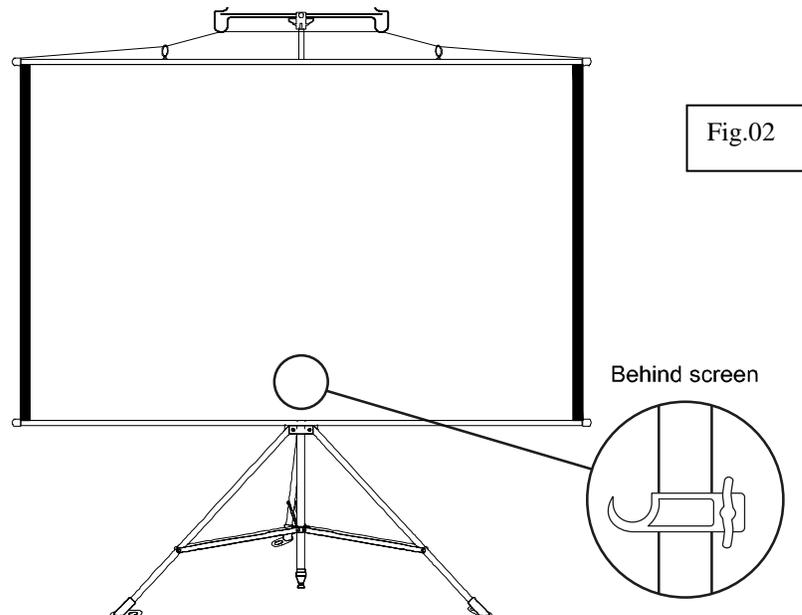

### C. Outdoor Use

The **center upright support** is tipped with a **spike-ground cap**. In addition, all three **tripod support** the use of stakes to ground the legs to any soft soil, lawn, etc., for added stability and mild wind conditions.

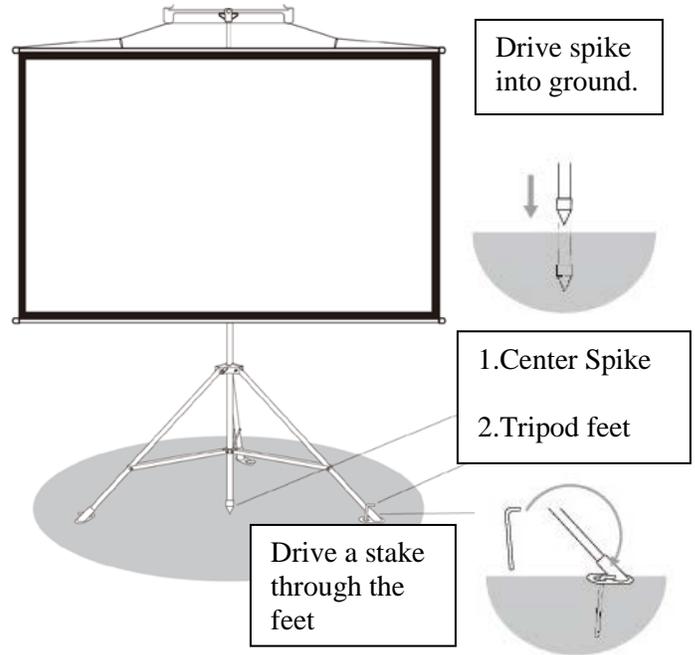


### Tripod Screen Material Disassembly

1. Slowly roll-up the screen material until it is fully rolled as shown below.


**NOTE: To avoid the tripod from possibly tipping over, roll the screen straight up and do not pull it near you. If possible, have someone assist you.**

2. Once rolled, remove the material by detaching the rope from the tripod support hooks.
3. Next, fold the tripod legs and support hooks into position to put away.

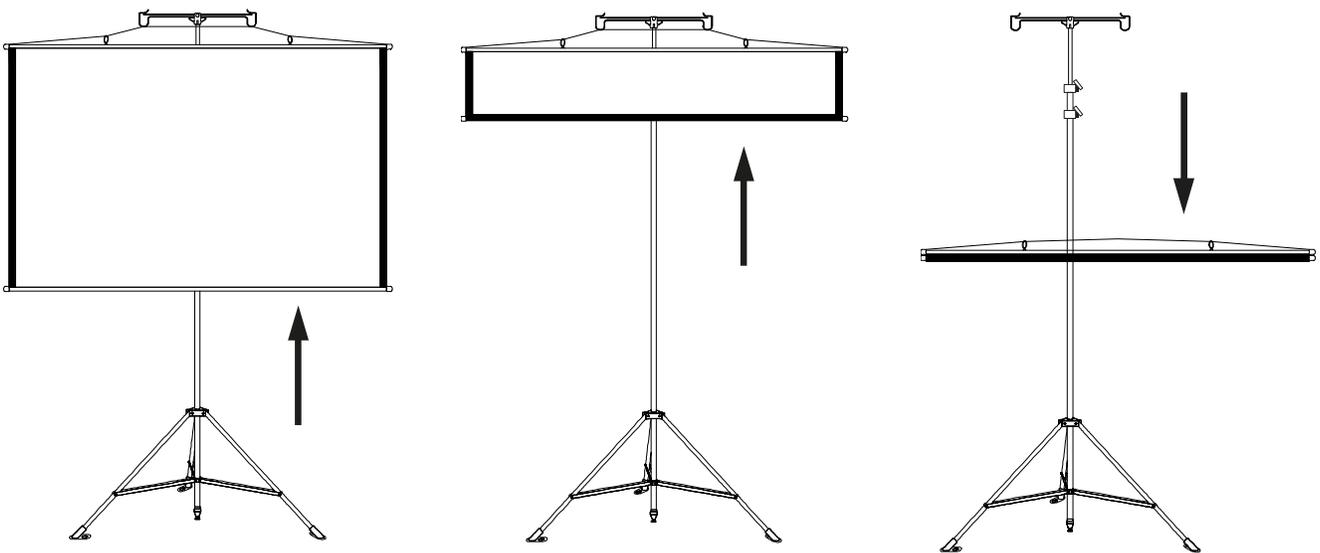


## Hanging the screen material to the wall


1. Measure the distance between the two markers on the back of the screen.

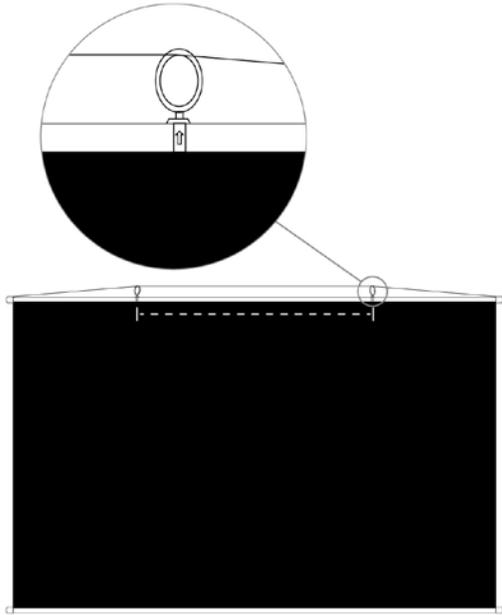

2. Mark the location of where the screen is going to be installed based on Step 1 measurements and use nails or self-tapping screws.

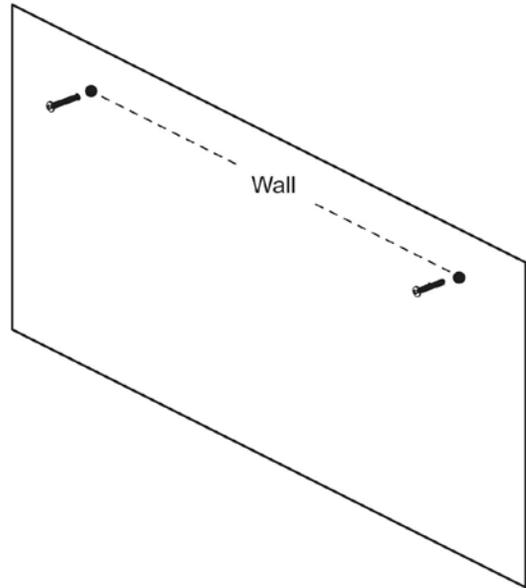

3. Hang the projection screen by the loops on the nails or self-tapping screws.

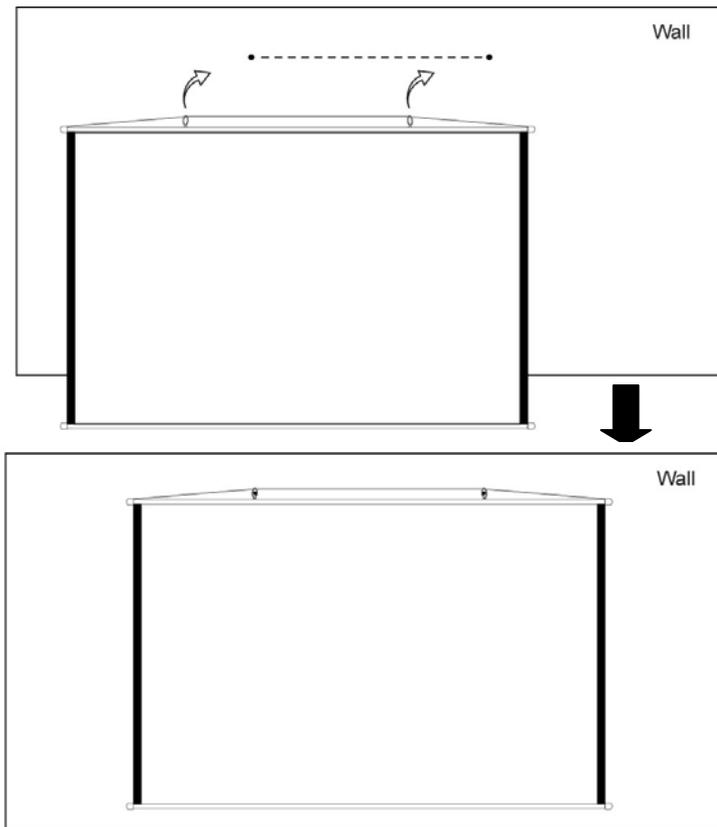

For a local Elite Screens contact or Technical Support, please visit [www.elitescreens.com](http://www.elitescreens.com)