



## ZOMS-T12V- Outdoor Wireless 12V Trigger

### Setup Instructions

**Step 1.** Setup the projector and fully **Drop** your electric screen.

**Step 2. Unplug** the power cable attached to your electric screen from the wall.

**Step 3.** Locate the **small hole** on the trigger and have a pointy object ready.

**Step 4.** Plug-in the electric screen into a power outlet and at the same time, using the pointy object, **Press and Hold** on the small hole located on the trigger (red light will blink) until the screen beeps.

**Step 5.** Connect the ZOMS-T12V into the projector.

**Step 6. Power off** the projector. The screen should retract back into its casing.

**Step 7.** To test the ZOMS-T12V is functioning correctly, power on the projector and the screen should **automatically** drop.



### NOTE

- ★ When powering off the projector, assure it is completely powered off (ex. fan off), then the screen will retract automatically.
- ★ If the motorized screen does not automatically drop or retract, repeat the process from step one.

For Technical support or an Elite Screens contact in your area, visit  
[www.elitescreens.com](http://www.elitescreens.com) | [info@elitescreens.com](mailto:info@elitescreens.com)