



Circuit Board Replacement Instructions for CineTension 2 Series

 
For technical support or further assistance, call 877-511-1211 x604

ATTENTION: Please make sure the version number and the Voltage of the circuit board matches the version number and the Voltage of the screen. Elite Screens does not recommend making unnecessary adjustments to the screen, as **improper adjustments will damage** the unit and **void your warranty**.


1. Remove the screws on the left end cap (facing the screen) with a Phillips screwdriver, then remove the end cap by carefully tapping it with a rubber hammer.




2. After removing the end cap, press in the clip on the white terminal, then pull out to remove the two white terminals.

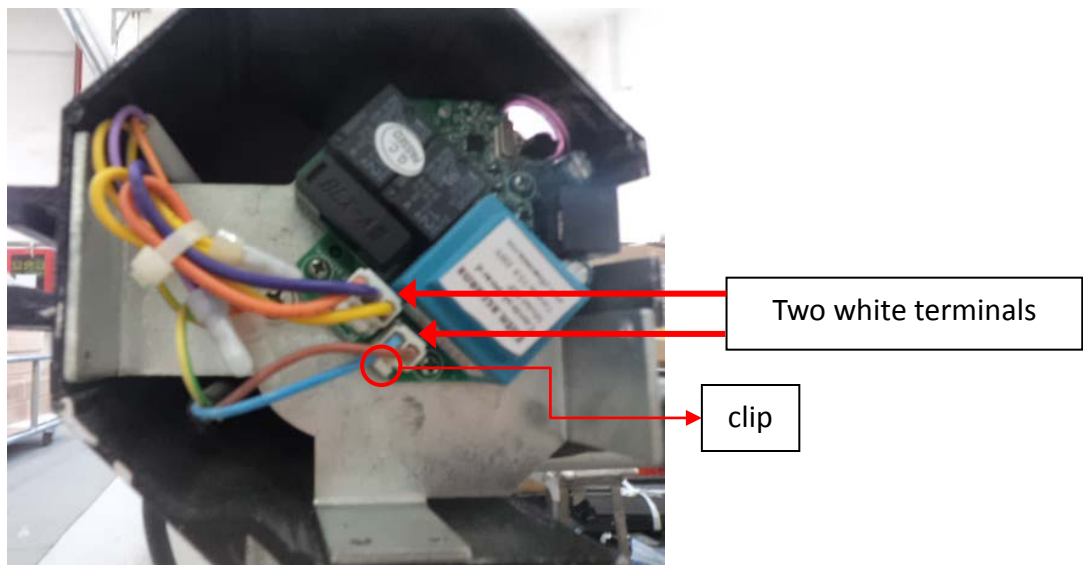

 
3. Remove the three screws that secure the circuit board with a Phillips head screwdriver. Set the screws aside to later secure the new circuit board.

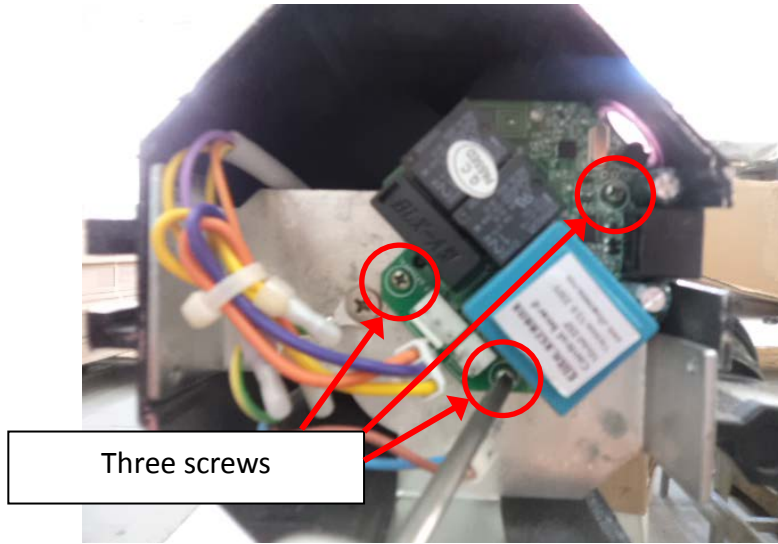

 Note: There will be 3 white washers that will fall from the trestle. These will also be used for the new circuit board.

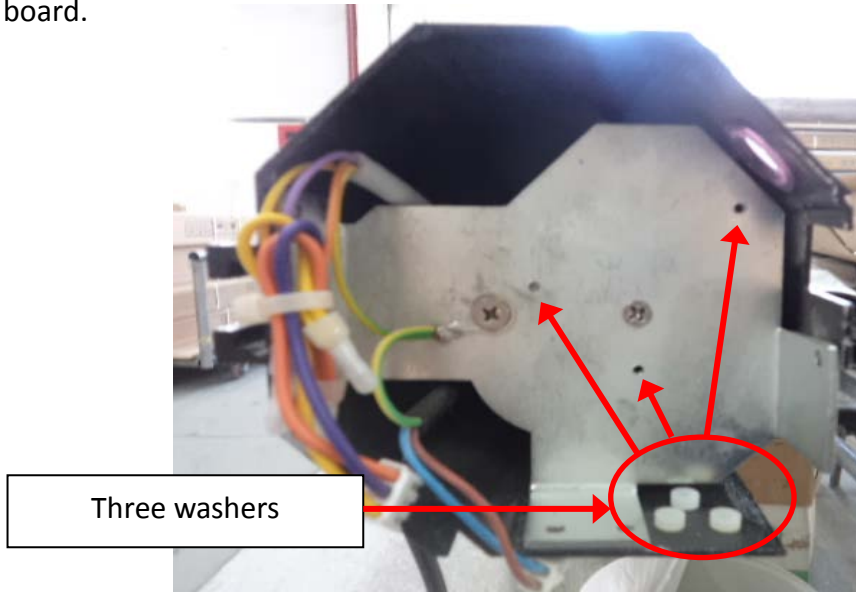

 4. Place washers on double sided tape where the screw holes are located.

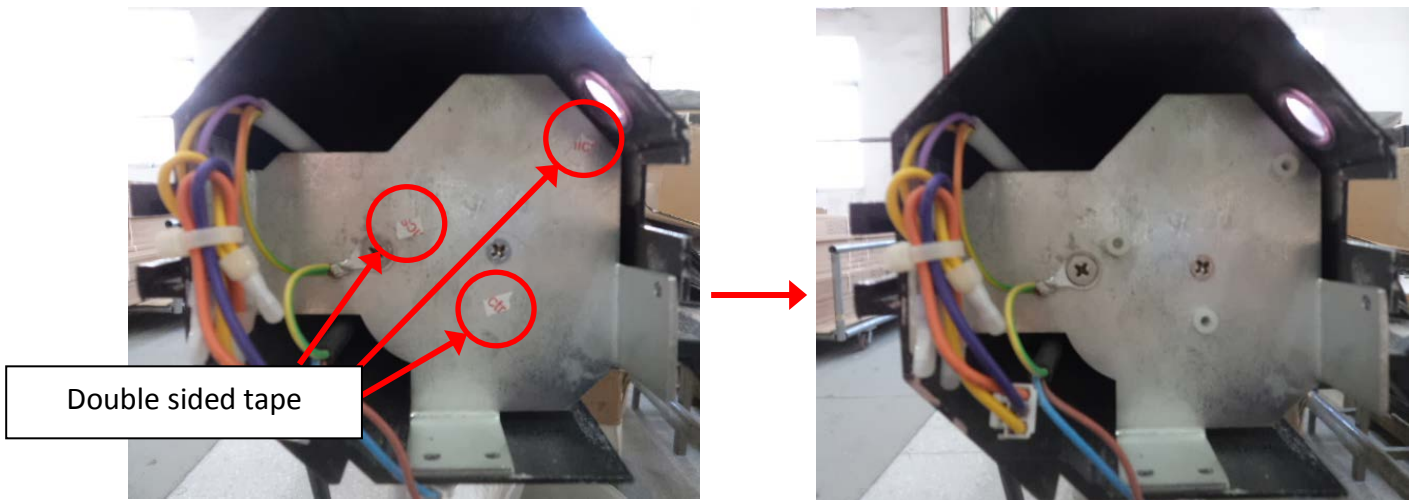

5. Utilize the saved screws to secure the new circuit board in same location of the previous.



6. Insert the two sets of white terminals into the new circuit board.



7. Slide the end cap back on and secure with screws removed in step 1.



Finished assembly.

For a local Elite Screens contact or Technical Support, please visit

www.elitescreens.com