

If your RF remote does not work with your screen, try the following steps to synchronize. See below for instructions.

Make sure new batteries or working batteries are in your RF remote before proceeding with the steps.

Synchronization Process

Step 1. Unplug your screen from the power outlet and wait one minute before proceeding to step 2.

Step 2. Press and hold the UP button on your RF remote.



Step 3. While holding the UP button, plug the screen back to the power outlet. (The screen should drop and retract to confirm the sync process)



Step 4. Wait 3 seconds and then release the UP button. The process is now completed

If your RF remote was unable to synchronize to the screen, repeat the procedure beginning from step 1.

For Technical Support or an Elite Screens contact in your area, visit

www.elitescreens.com