

If your RF remote does not work with your screen, try the following steps to synchronize. See below for instructions.

***Make sure new batteries or working batteries are in your RF remote before proceeding with the steps.***

### **Synchronization Process**

**Step 1.** Unplug your screen from the power outlet and wait one minute before proceeding to step 2.

**Step 2.** Press and hold the STOP button on your RF remote.



**Step 3.** While holding the STOP button, plug the screen back to the power outlet. (The screen should drop and retract **TWICE** to confirm the sync process)



**Step 4.** Once the screen drops and retracts twice, release the STOP button. The process is now completed.

**If the screen only drops and retracts once or your RF remote was unable to synchronize to the screen, repeat the procedure beginning from step 1.**

**For Technical Support or an Elite Screens contact in your area, visit**

**[www.elitescreens.com](http://www.elitescreens.com)**