



ezCinema 2/ ezCinema Tab-Tension Series

Portable Floor Pull-Up Screen

USER'S GUIDE

Product Description

Thank you for purchasing the *ezCinema 2/eZCinema Tab-Tension* portable free-standing projector screen. The *ezCinema 2/eZCinema Tab-Tension* is a pull-up screen that conveniently raises and retracts using a scissor-back mechanism which allows the screen to promptly be setup and taken down in seconds.

Parts Identification

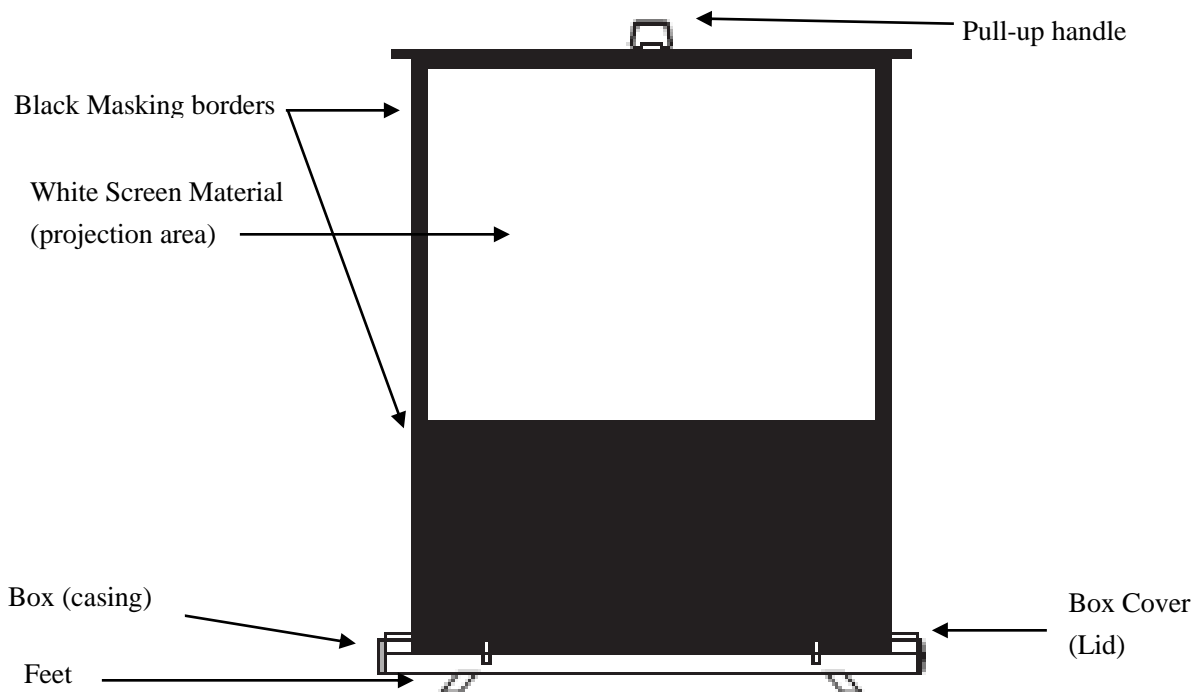


Fig. 3



Precautions:

Warning! Screen damage can result from operational errors if the precautions are not followed.

- In accordance with practicing home fire safety and avoiding screen damage, do not place the screen near or beside a fireplace or high temperature objects such as a gas stove, BBQ or heater.
- Place the screen beyond the reach of children.
- Do not use the screen in a very strong windy environment
- Do not use on uneven surfaces

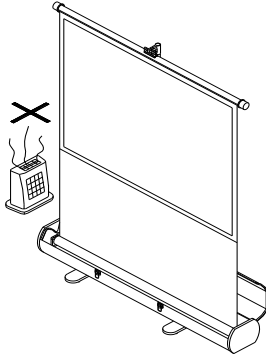


Fig. 1

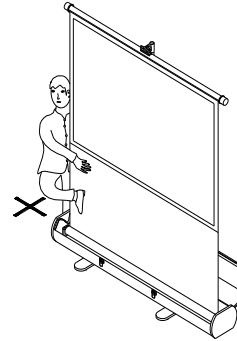



Fig. 2

Setting up the Screen

The ezCinema 2 screen is designed to be used as an easy to operate portable screen for a variety of presentation environments on leveled floors. Its design enables it to be versatile for use in either classroom, conference room, home or patio presentations. When packed, the unit carries with ease and opens up for projection presentations within seconds. As a general rule, portable projector screens should be installed in an area free from wind, heat or open flame sources such as a heater, BBQ grill or fireworks display.



1. Extend base feet:

Locate the base feet on the bottom of the box at each end and rotate them clockwise until they form right angles.

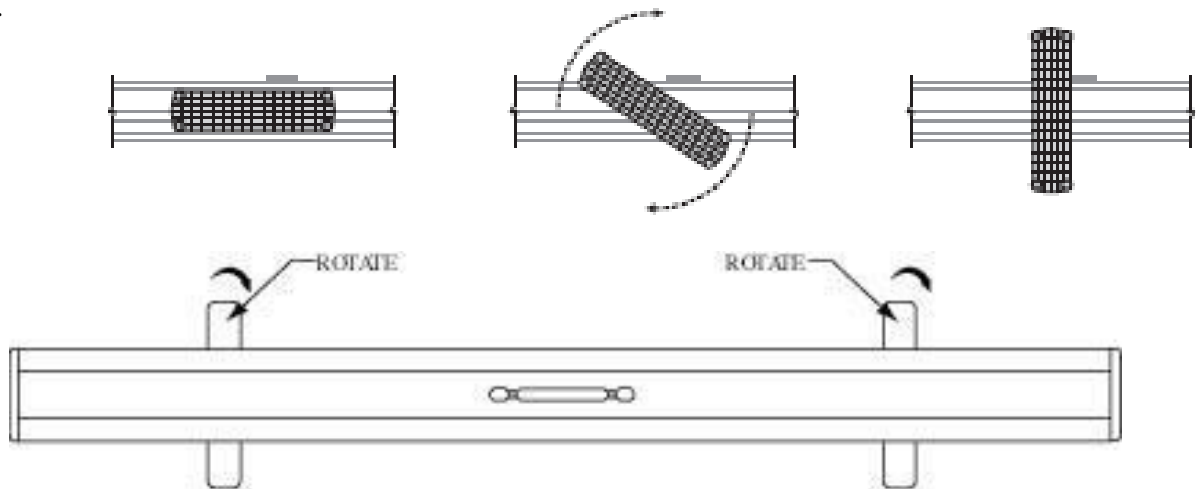

2. Open the box cover:

 
Unlatch the buckles at both ends of the box and open the box cover.

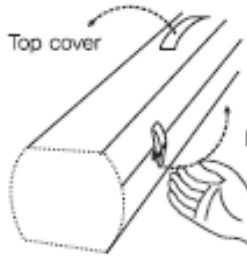

3. Pulling up the screen:


CORRECT USE

- PULL UP THE SCREEN BY THE HANDLE UNTIL IT IS FULLY EXTENDED.

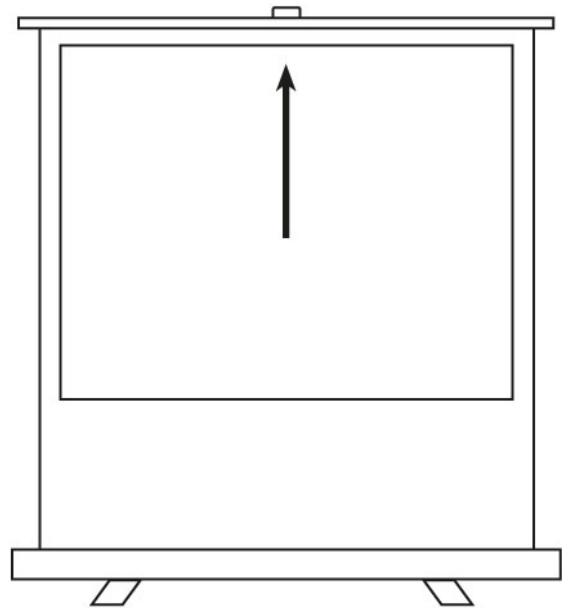

INCORRECT USE

- NEVER USE THE SCREEN UNLESS IT IS FULLY EXTENDED.
- THE SCREEN IS SUSCEPTIBLE TO RETRACTING ON ITS OWN AND CAN CAUSE INJURY.
- PRODUCT DAMAGE CAN ALSO OCCUR WHICH IS NOT COVERED BY OUR STANDARD WARRANTY.

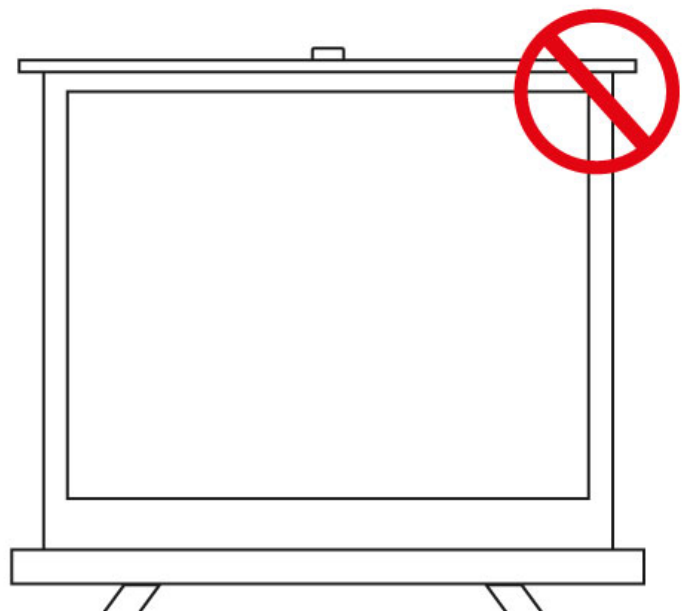


Flexible Upright Support

The ezCinema 2/Tension utilizes a cross-spring riser that facilitates its free-standing operation. When the mechanism expands to its full height, the screen may develop a slight forward tilt. This is a natural feature to enhance surface tension and stability. The best results are achieved with a tabletop-mounted projector and a flat, level floor for the screen.

Leaning Tip: If you notice the screen leans, tighten the Philips screws on the cross-spring risers as shown below. Then raise the screen up and down a few times to complete the adjustment.

Example of screen fully extended front and back view

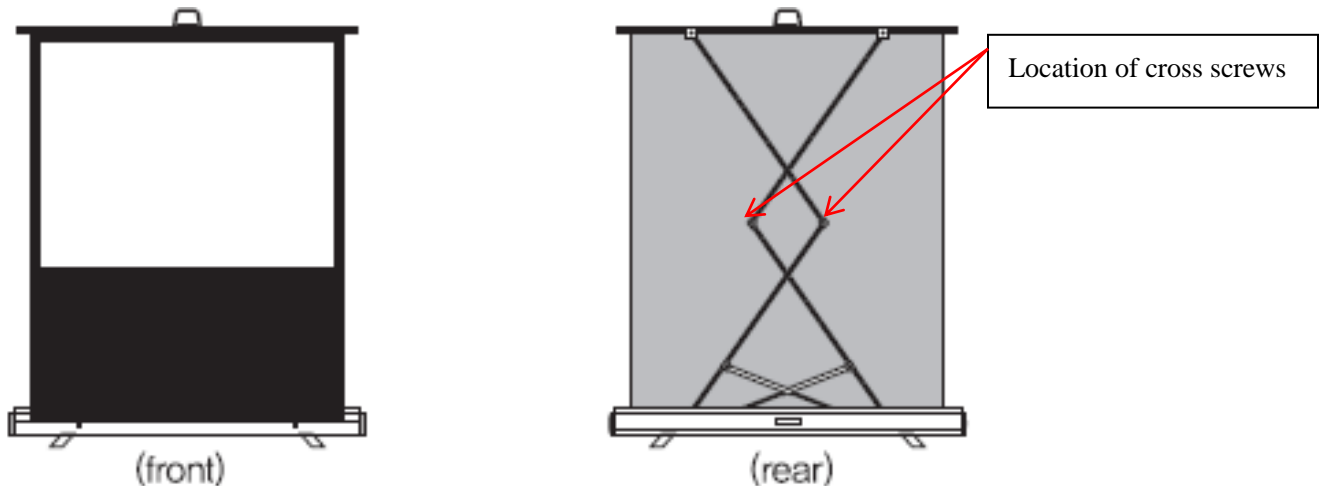


Putting screen away

1. Retract the screen into case:

Press the screen's handle slowly in a downward motion and allow the screen to retract back gently into the housing.


CAUTION: Always hold onto the handle when retracting screen. Do not let go of the handle and allow the screen to retract on its own. The force can cause permanent product damage and injury.

Tip: If the screen does not go in the cradle, lift it up and maneuver it inside.

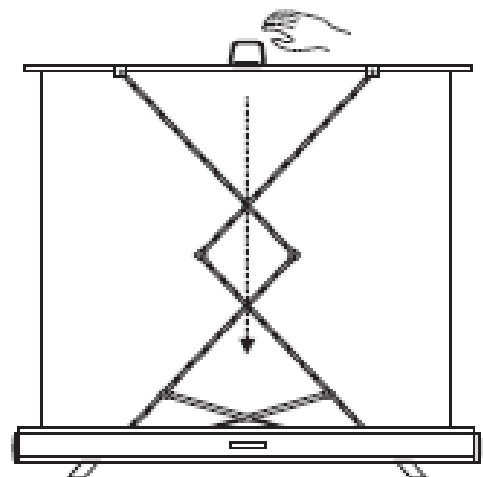


2. Closing it up:

Close the top cover and snap the buckles into place at both ends and verify that the screen's box is closed securely.

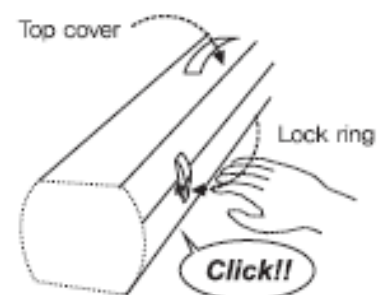


3. Draw the base feet back:

Slightly lift one end of the box at a time and rotate the two feet on the bottom of the box until they are in parallel alignment with the box.

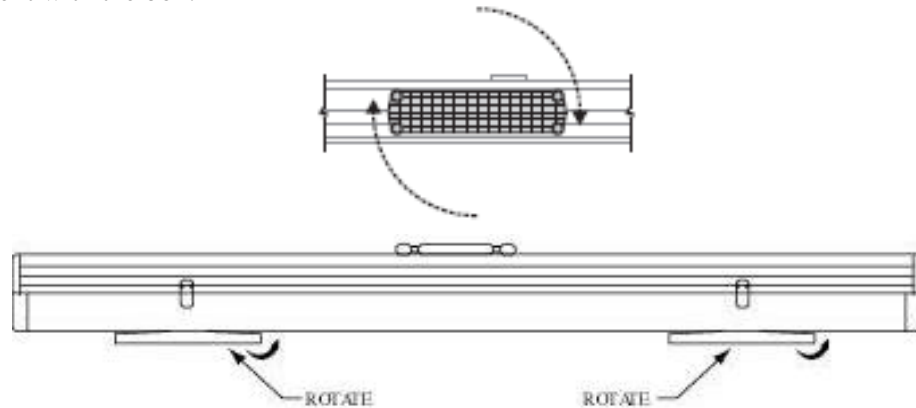

4. Storing the screen:

The recommended place for storage would be a corner spot or in a closet, but the ultimate choice is up to you.

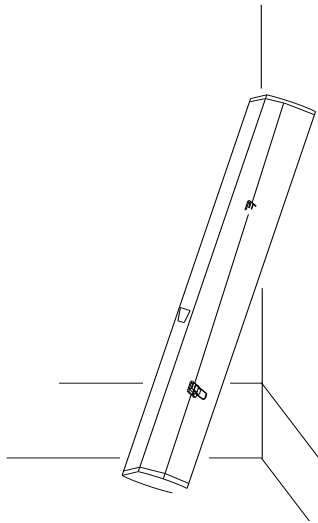

The following points should be noted to assure the sound performance of the screen.

1. Never use your hand to touch the screen surface.
2. Never scrabble on the screen.
3. Don't touch the screen with hard or sharp objects.
4. Please use clean cotton cloth or soft dust brush to remove dust particles from the screen.
5. The screen material may be cleaned with mild soap and water on a soft cloth
6. Avoid using or storing the screen in extreme temperatures and direct sunlight

For a technical support or a local Elite Screens contact visit,

www.elitescreens.com