



## Electric Motorized Projection Screen

# Home 2 Series

## User's Guide

### **Important Safety & Warning Precautions**

**Make sure to read this user's guide and follow the procedure below.**

**Caution:** The Screen's Black Top Drop is already set to its maximum drop distance. There is NO extra Black Top Drop in the roller. Please be aware of this as it will void your warranty with Elite Screens. Unapproved changes or modifications (except for cutting the power cord for hardwire installations) to this unit are prohibited and will void your warranty. For more information, please contact our Technical Support Department at [techsupport@elitescreens.com](mailto:techsupport@elitescreens.com).

- Please retain this user's guide for future reference.
- To avoid damaging the unit, do not use with any unauthorized accessories not recommended by the supplier.
- Handle the unit carefully during transportation to avoid any damages.
- To ensure safe and reliable operation, direct connection to a properly grounded power source is advised.
- The power outlet supplying power to the unit should be close to the unit and easily accessible.
- Do not install the unit on uneven or inclined surfaces.
- Do not place any heavy objects over the power cord.
- Position the power cord properly to avoid creating a trip obstacle.
- To avoid an electrical shock or fire, due to a loose contact or short circuit, do not overload the power cord.
- The internal & external parts of this unit are not end user serviceable. Do not attempt to disassemble this unit by yourself. No one except authorized technicians can open and make repairs to this unit.
- Make sure the power source that this unit is connected to has a continuous power flow.
- If there is need to use an extension cord, make sure the cord has an equal rating as the appliance to avoid over heat.
- Do not handle the power plug when your hands are wet or your feet are in contact with water.

### **Do not use this unit under the following circumstances.**

- Disconnect the power cord under the conditions of heavy rain, wind thunder or lightning.
- Avoid direct sun light, rain shower and moisture.
- Keep away from fire sources and high temperature to prevent this device from overheating.
- Cut off the power supply first before transportation or maintenance.
- To avoid possible injury and/or an electric shock, do not attempt to use this screen if there is obvious damage or if there are any evident broken parts.

## **WARNING**

Due to various installation environments, the instructions provided in this user's guide are for reference only. Please consult a professional installation company for further installation and safety advice. The installer must insure that proper mounting hardware is used to provide adequate strength suitable for the installation. Elite Screens is not liable for any faulty installations.

The Screen's **Top Black Drop** is already set to its maximum drop distance. There is **NO** extra top black drop in the roller. Please be aware of this as it will void the limitation of your warranty.

Individual modifications to this product are prohibited and will void the warranty with the supplier. Please contact Elite Screens Customer Service for any questions.

### **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that the interference will not occur on a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- ✓ **Reorient or relocate the receiving antenna of the device which may be causing the interference.**
- ✓ **Increase the separation between the screen and the device's receiver.**
- ✓ **Connect the equipment into a different power outlet other than the device.**






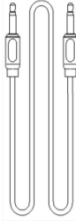

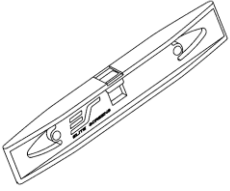
## **Pre-Installation**

1. Carefully unpack the screen.
2. Always handle the screen in a leveled position on a clean surface.
3. In order to protect the screen from exposure to stains, keep the screen out of contact with foreign particles such as dust, sawdust, and/or liquids.

### **NOTE**

Regardless of the mounting method, the screen should be securely supported so that the vibration or pulling on the viewing surface will not cause the casing to become loose or fall. The installer must insure that the fasteners used are of adequate strength and suitable for the installation location.

## Home 2 Series | Controls and Accessories

A. IR Remote	B. RF Remote	C. Wall switch control box	D. 5-12 volt trigger cable
			 <p style="text-align: center;">Red 12V    Green 0V</p>
E. IR extended "eye" receiver	F. Wireless 5-12v (3.5 mm) mono trigger cable	G. AAA batteries	H. Bubble leveler
			

### Screen Operation

**Electric Current:** Depending upon region, your Elite Screen will operate on 100v, 110v, or 220v voltage.

1. After ensuring the power outlet & screen are compatible (voltage), plug the power cord into the power outlet.
2. Once the screen has power, you'll be able to control it using any of the 6 methods described below.

 
 
 
#### 6 ways to control your Home 2

1. **IR remote control (Item A, Fig 1):** The Infrared functions by direct line of sight contact with a beam range of 30 feet. Aim the IR remote at the circular window located on the left side of the screen.


2. **IR "Eye" Receiver (Item E, Fig 2):** The IR "Eye" Receiver plugs directly into the control box's RJ45 port to present a low profile line-of-sight control option for your IR remote control even in a recessed ceiling installation.

3. **RF Remote Control (Item B):** The radio waves eliminate the need for a direct line of sight with a range of 100 feet.


4. **3-Way Wall Switch (Item C, Fig 3):** The 3-way wall switch is a wall mount switch with an up/stop/down button and plugs directly into the control box's RJ45 port.

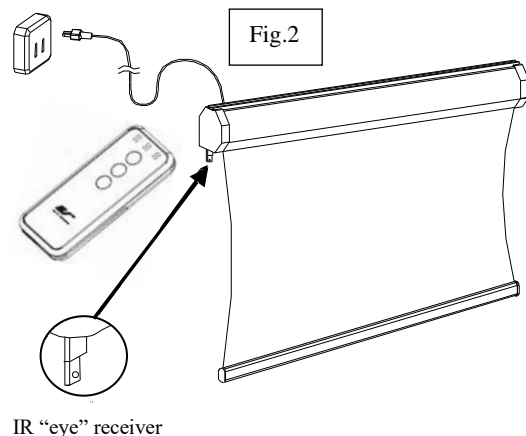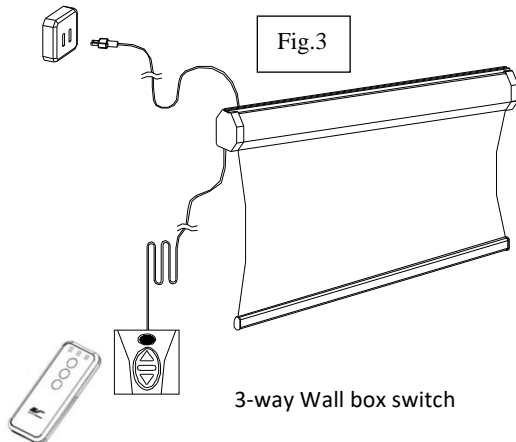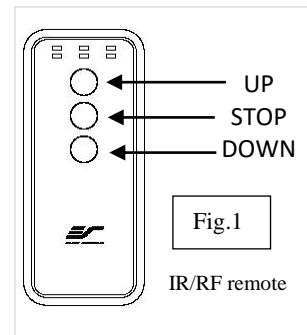

**5. 5-12 volt trigger (Item D, Fig 4):** The built-in 5-12V trigger input allows your screen to synchronize its drop & rise with the projector's power cycle. The screen deploys when the projector powers up and will retract when the projector powers down. The 5-12 volt RJ45 cable connects to your projector's trigger output via a separate cable that may or may not be provided by the manufacturer of the projector. The trigger feature will not work without an output cable from the projector, but it can be tested by connecting the Red (+) and Green (-) cable to a 9-volt battery.

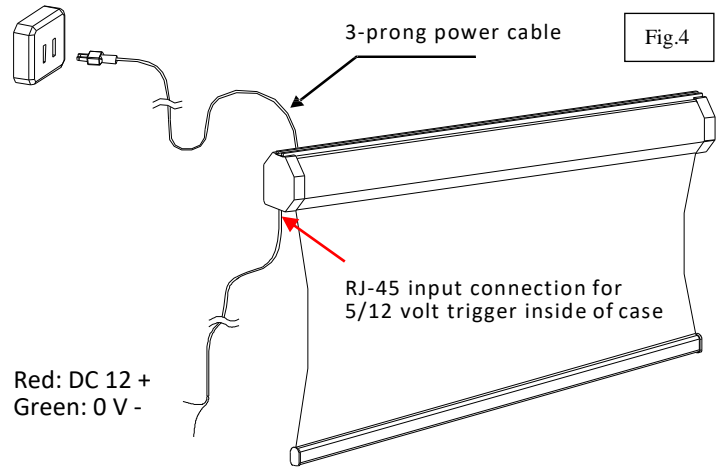 


 **6. Wireless 5-12 volt trigger (Item F, Fig 5):** The RF remote control serves as a dual purpose, independently as a handheld remote control, or in conjunction with the Wireless 5-12 volt trigger cable. The radio frequency technology can be programmed to send a wireless signal to synchronize its drop/rise with the projector's power cycle.

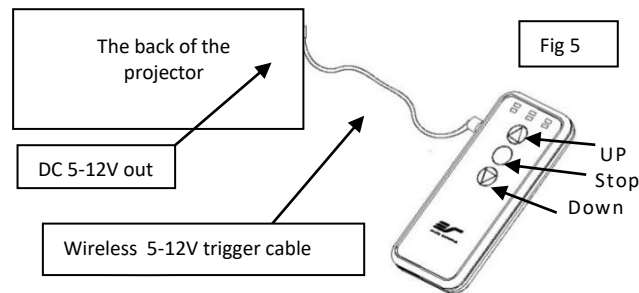

### Here's how to set up your Wireless 5-12 volt trigger | Synchronization Instructions

 **Step 1:** Connect one end of the 3.5 mm wireless 5-12 volt trigger cable to the RF remote.



**Step 2:** Connect the other 3.5 mm end of the wireless 5-12 volt trigger cable to your projector

**Step 3:** Make sure to unplug your screen from the power outlet

**Step 4:** Hold the **UP** button on your RF remote

**Step 5:** While holding the **UP** button, plug the screen back to the power outlet

**Step 6:** Wait 5 seconds and then release the **UP** button

**Step 7:** Your 5-12V wireless trigger should now be activated with your screen and ready to be used and able to control your screen with your projector's power cycle

Repeat the steps again if not successful.


(Please be aware, the projector on/off cycle may take longer to fully activate. It usually takes around 20-30seconds for full off and on cycle each time)

### Hardware Parts List

 Please make sure all items listed below are included before proceeding with the installation.




A



B



 C



D


120" & above x 3 brackets

Hardware Parts List		QTY
A. Screw & Dry Wall Anchor		2 EA.
B. Bolt		2 EA.
C. Masonry Screw & Anchor		2 EA.
D. Extruded Hanging Bracket		2 or 3 EA.


## Installation Instructions

 Please consult a professional installer. Elite Screens is not liable for any faulty installations.


1. Insert each **Bolt (B)** through the right & left slide channel located on the top of the screen's case.

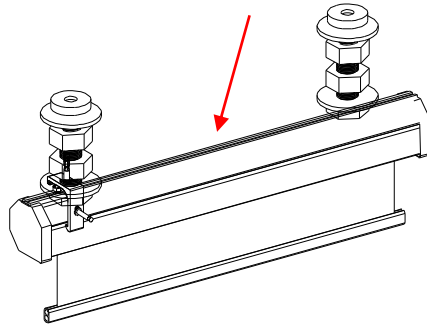

 
2. Slide the **Extruded Hanging Bracket (D)** through the rail located below the slide channel until it meets with the top of the **Bolt (B)** and slightly secure the lug-nuts located on the top & bottom of the bolt to attach the bracket.

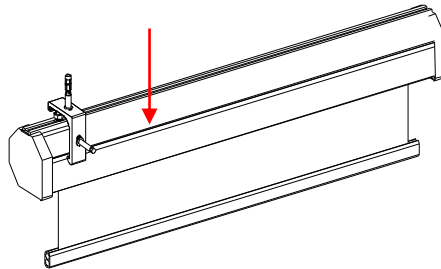

 
3. Mark the installation location to drill your hole. Insert the proper screw and secure the bolts to the bracket.

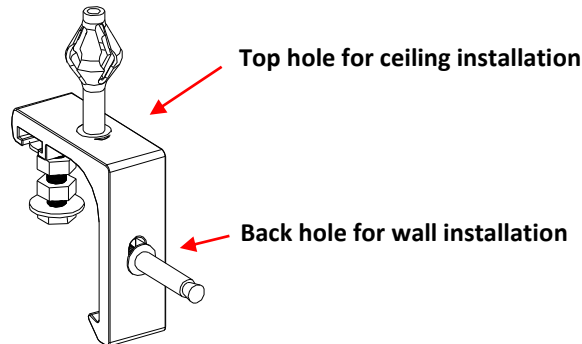

 
4. Example of the Home 2 installed to a wall, ceiling and enclosed.

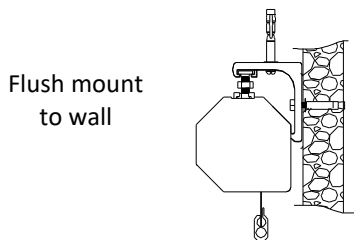

Flush mount  
to wall

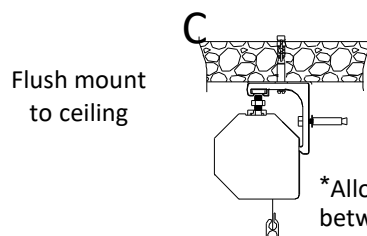 

Flush mount  
to ceiling

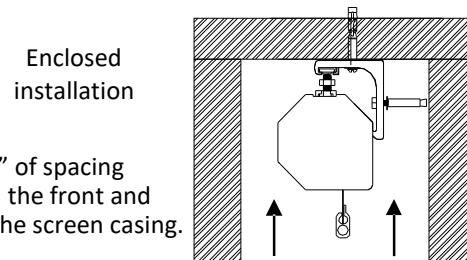 

Enclosed  
installation

\*Allow 2" of spacing  
between the front and  
back of the screen casing.

## Trouble Shooting

For additional information, please contact Elite Screens at [techsupport@elitescreens.com](mailto:techsupport@elitescreens.com)

1. If your screen does not move, please check the power supply. The screen will understandably not move without power.
2. Make sure the power cord is firmly plugged to the power outlet.
3. Make sure that all cable connections are secure.
4. If the screen works well with the line switch but not with the remote control, please make sure the remote controls have fresh batteries. Change the batteries every 6 months to ensure proper operation of the remotes.

## FAQ's

1. **Q:** Why does my screen no longer function?  
**A:** Make sure your wall plug has power and that the screen is properly plugged. The fuse on the screen will also need to be checked. Please contact [techsupport@elitescreens.com](mailto:techsupport@elitescreens.com) for the location. The tubular motor in this screen is equipped with a thermal relay. This feature will automatically shut off the screen in the event of the motor becoming too hot. This will prevent the motor from overheating. If you should experience this, please let the screen's temperature decrease for 10-15 min. before usage.
2. **Q:** How is the screen material cleaned?  
**A:** The screen material can be cleaned with mild soap and water.
3. **Q:** What type of batteries do the remote controls require?  
**A:** The IR and RF remote controls use AAA alkaline batteries.
4. **Q:** Can you manually pull down the screen?  
**A:** No, manually pulling down the screen will damage the electronic motor rolling system and void your warranty.
5. **Q:** How could I setup my Screens IR receiver to work with my learning remote control system  
Do you have any IR codes I can use to achieve this?  
**A:** Our IR remote controls have been evaluated and entered in to the databases of some Universal remote control manufacturers. Please contact the manufacturer of your remote to inquire about your remotes ability to function with ours. If they have not evaluated our remote control then the following list of Binary codes will be used for most remote setups.  
For Spectrum, VMAX2 (Plus), **Home2** and CineTension 2 Series  
Up: 1111 0000 0001  
Stop: 1111 0000 0010  
Down: 1111 0000 0100
6. **Q:** What is the gain on the matte white screen material?  
**A:** The matte white material has a gain of 1.1. For detailed information, please visit [www.elitescreens.com/home2](http://www.elitescreens.com/home2)

For local Elite Screens contact or Technical Support, please visit  
[www.elitescreens.com](http://www.elitescreens.com)