



ZOMS2-LEGS

Yard Master 2 Extension Legs Quick Guide

Thank you for choosing the *Extension Legs* accessory for your *Yard Master 2* portable projection screen! Please read through this user guide before utilizing the accessory. Correct usage and maintenance will ensure a long product life

Care & Use Instructions

- ◆ After using the extension legs, disassemble and store them in a safe and secure location.

NOTE: Extension Legs will NOT fit in carrying bag supplied with the Yard Master 2 Series.

- ◆ To avoid damage and injury, the screen and extension legs should only be operated by adults.

Product Description


Design: The aluminum frame is designed to be lightweight and easily operated making it easy to carry, assemble and disassemble.

Replacing the Yard Master 2 legs

If screen is already fully assembled, simply replace the legs by following the disassembly steps on page 2, then the assembly steps starting below. For full assembly instructions please refer to the Yard Master 2 Series User Guide.


Assembly

1. After the initial assembly of the screen frame, insert the *extension legs* into the openings located at the left and right bottom sides of the *folding frame*. Secure them by fastening the *knob screw* into the adjacent hole. Next, screw the *eyebolts* into the openings located at the top of the frame (Fig.1)

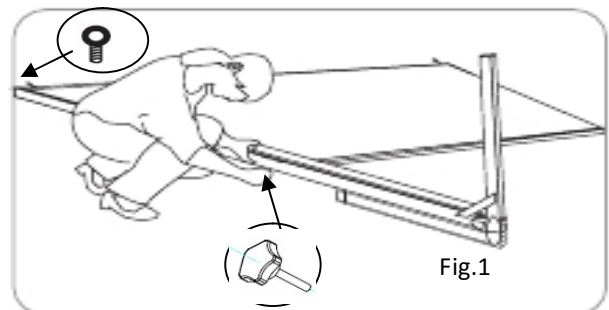

2. Continue with screen material assembly seen in full Yard Master 2 Series User Guide.


3. Next, lift the screen up while simultaneously opening the frame legs. Insure the legs are locked in place by pressing down on the hinges near the bottom center of each leg. Two people are needed for this step. (Fig.2-3)

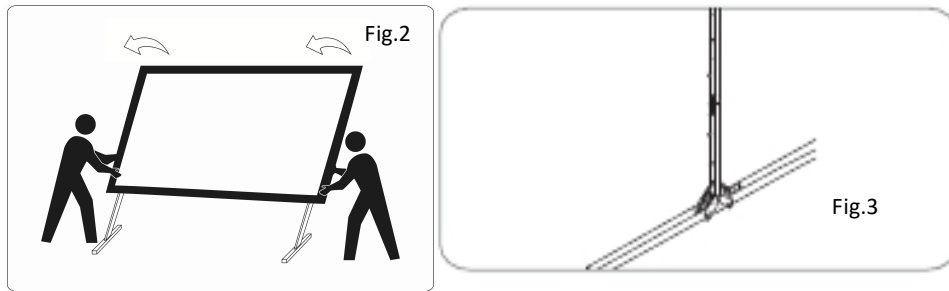

4. Refer to Yard Master 2 User Guide for additional steps on securing your screen.


Disassembly

1. Remove ropes and stakes from the ground, if needed, then unlatch the hinged support bars on front side of each leg so that it is bent and fold that half of the legs up for the next step.

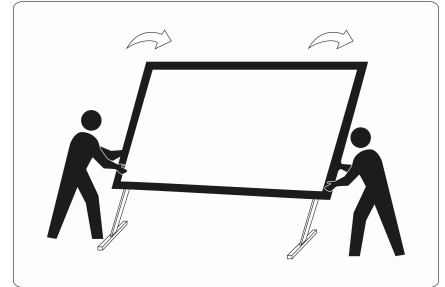

2. Slowly lower the screen to the ground (towards the closed legs). Two people are needed for this step.

3. Unlatch the hinged support bars and fold down other half of the legs. Remove **knob screws** before proceeding.

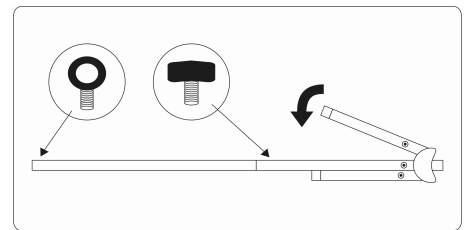

4. Remove the **legs** from the **folding frame** and continue with disassembly, referring to the full user guide.

NOTE:

- All other accessories, except for extension legs, are supplied with the Yard Master 2 Series when purchased separately.
- See Yard Master 2 Series User Guide for full assembly instructions of the screen.

For a local Elite Screens contact or Technical Support, please visit

www.elitescreens.com