



Sable Frame CineGrey 3D® Series

ezFrame CineGrey5D® Series

Ceiling Ambient Light Rejecting (CLR®/ALR) Fixed Frame Screen




USER'S GUIDE


V3

Congratulations on your new *ezFrame/Sable* Frame purchase! The screen material included is our *award winning GREENGUARD GOLD and ISF Certified* CineGrey 3D®/5D® which is a front projection material, precisely formulated for environments with minimal control over room lighting. It was designed to *enhance picture brightness, offer accurate color fidelity, and improve contrast levels*. The CineGrey 3D®/5D® is best for family rooms, educational facilities, conference rooms, house of worship or any applications in which incident light is a factor.


In order for the *CineGrey 3D®/5D®* to maintain its projection qualities and optimum performance please refer to the list below for proper maintenance and cleaning.

- Use a dry microfiber cloth to remove dust from the screen's surface.
- When cleaning, use a damp microfiber cloth with warm water to remove any marks.
- Never rub or apply pressure when cleaning the surface.
- Never attempt to use any solutions, chemicals or abrasive cleaners on the screen surface.
- In order to avoid damaging the screen, avoid touching it directly with your fingers, pens/pencils or any other sharp or abrasive objects.

Frame Parts List		
A. Vertical Frame x 2pcs 	B. 1/2 Horizontal Frame x2 pcs 	C. 1/2 Horizontal Frame x 2 pcs 

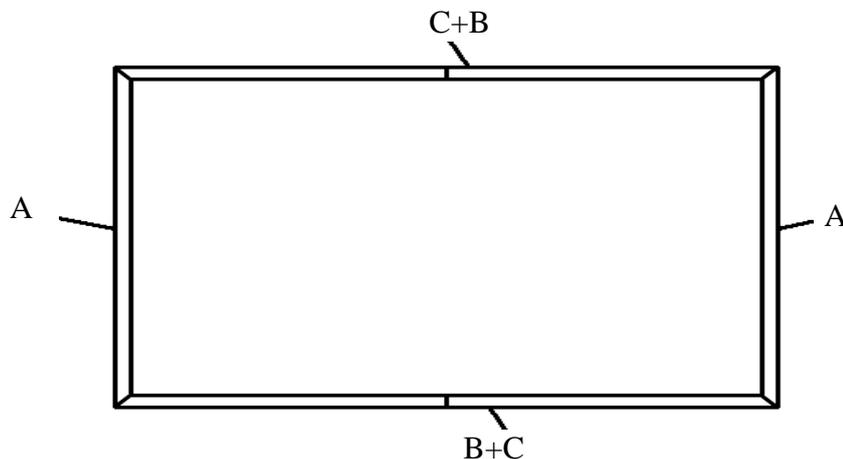


Hardware Parts List

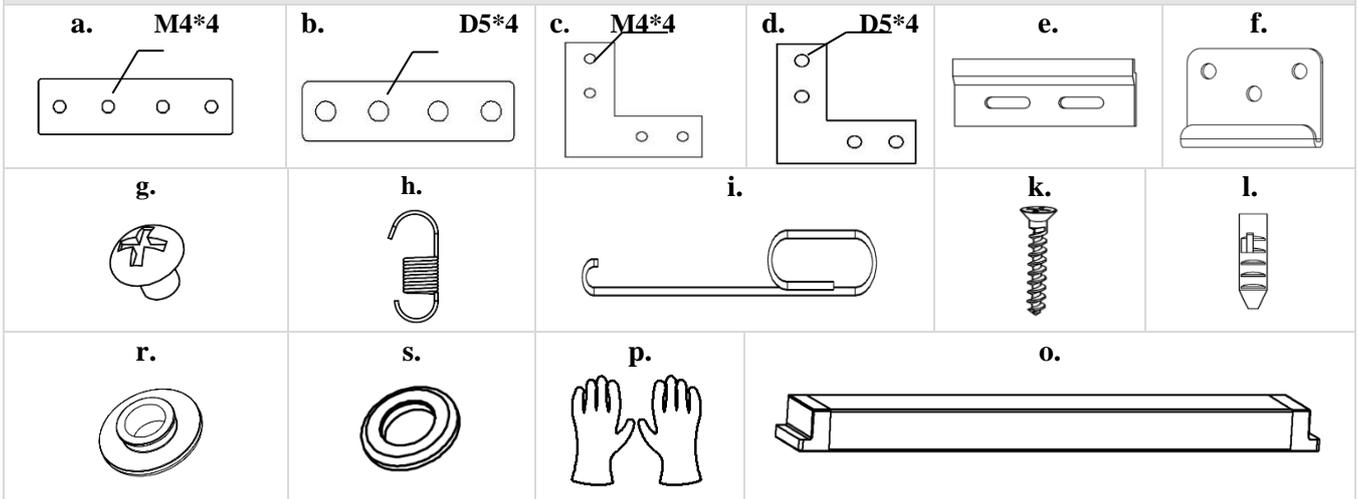

Item	Parts List	92"	100"	110"	120"	135"	150"	165"	180"	200"
a.	Center Joints- M4 (bottom position)	2	2	2	2	2	2	2	2	2
b.	Center Joints-D5 (top position)	2	2	2	2	2	2	2	2	2
c.	Elbow Joints M4 (bottom position)	4	4	4	4	4	4	4	4	4
d.	Elbow Joints D5 (top position)	4	4	4	4	4	4	4	4	4
e.	Top hanging brackets	2	2	2	2	2	2	2	2	2
f.	Bottom brackets	2	2	2	2	2	2	2	2	2
g.	M4x7 Screws	24	24	24	24	24	24	24	24	24
h.	Spring	84	92	100	112	124	136	148	160	180
i.	Pull Hook	2	2	2	2	2	2	2	2	2
k.	Wall Screws M5x50	8	8	8	8	8	8	8	8	8
l.	Hollow Wall anchors	8	8	8	8	8	8	8	8	8
r.	Bottom plastic eyelet	80	88	96	108	120	132	144	156	176
s.	Top plastic eyelet	80	88	96	108	120	132	144	156	176
p.	White gloves	2	2	2	2	2	2	2	2	2
o.	Center Support Bar	1	1	1	1	1	1	2	2	2

Frame Assembly


Step 1: Place the EPE sponge (foam) sheet on the ground of the area where the screen will be assembled.

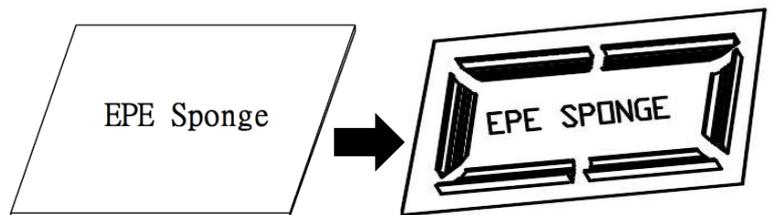

Step 2: Position the pieces of the frame on the EPE sponge in the arrangement shown below.


Step 3: Insert *center joint* (a/b) connectors into *one-half of the horizontal frame* (B/C) and secure with the *M4x7 screws* (g) as shown in the illustration below.

Tip: The center joint (b) with the larger diameter holes should be on top.

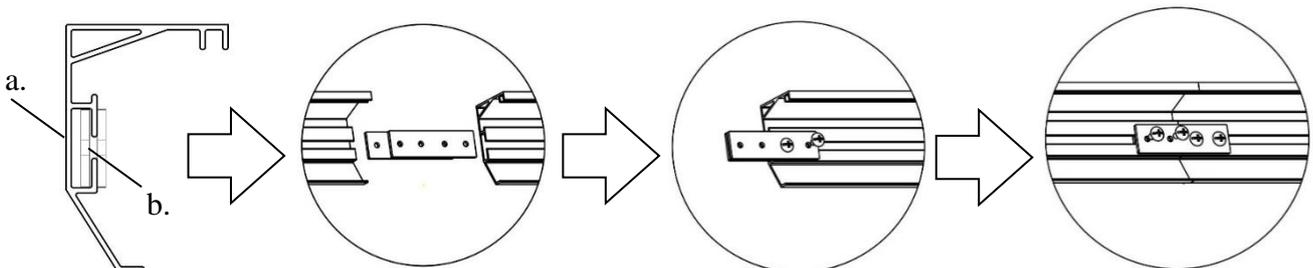


Step 4: Connect the *elbow joints (c/d)* to the top and bottom sections of the vertical frame. Once inserted, connect the vertical sections to the horizontal frame sections. Make sure all holes are in alignment and the frame pieces are flush (no gaps). They should form perfect right angles.

Tip: The elbow joint (d) with the larger diameter holes should be on top.

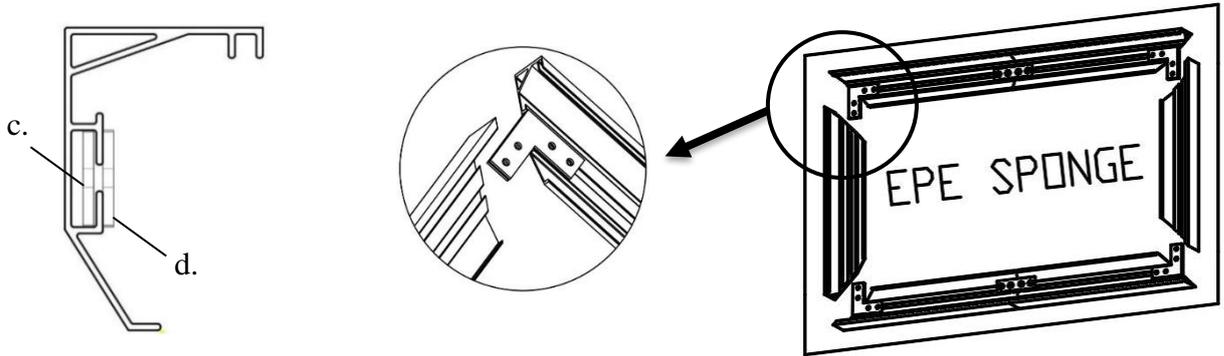


Step 5. Secure the elbow joints by fastening them with *M4x7 screws (g)*, 4 at each corner.

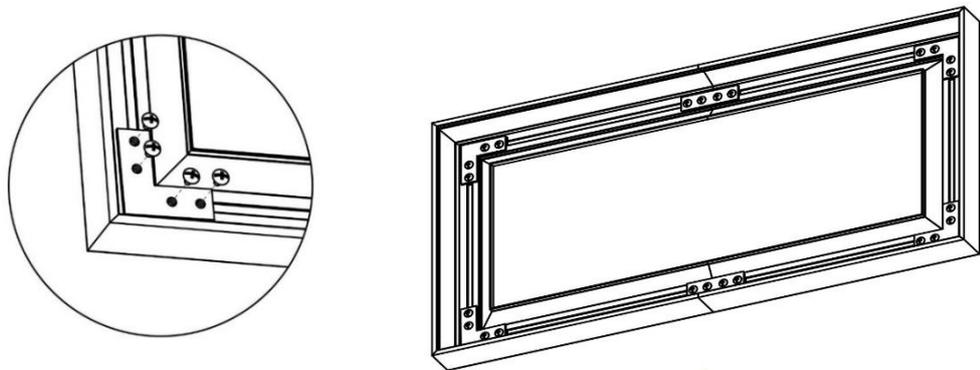


Screen Material

Step 6: Put on the *white gloves (p)* and carefully unroll the screen material on a clean surface from the roller to the other side as shown below. The back side of the screen material should be placed upwards. Then place a *bottom grommet (r)* on the screen material's eyelet and snap in the *top grommet (s)* as shown below.

Repeat the process for all eyelets.

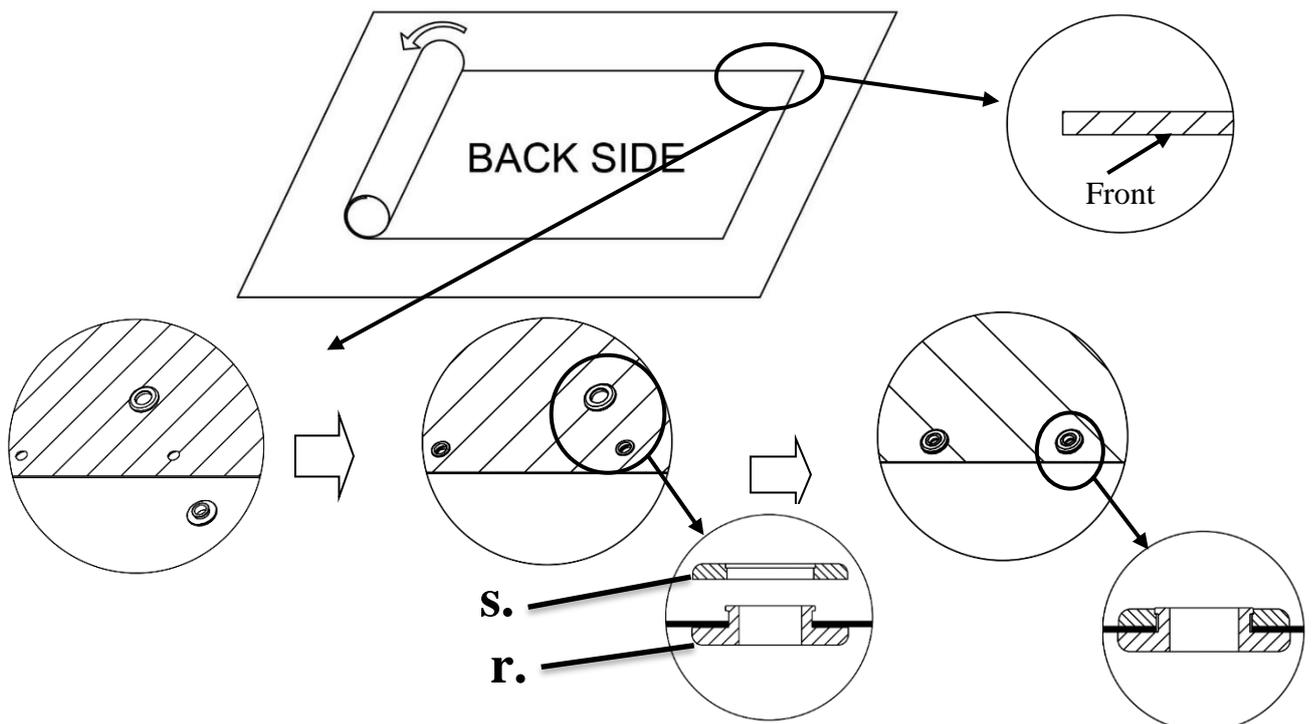


Step 7: Carefully place the screen on top of the assembled frame as shown below. Make sure that the angular edges of the frame are not allowed to come into direct contact with the screen material to avoid puncturing.

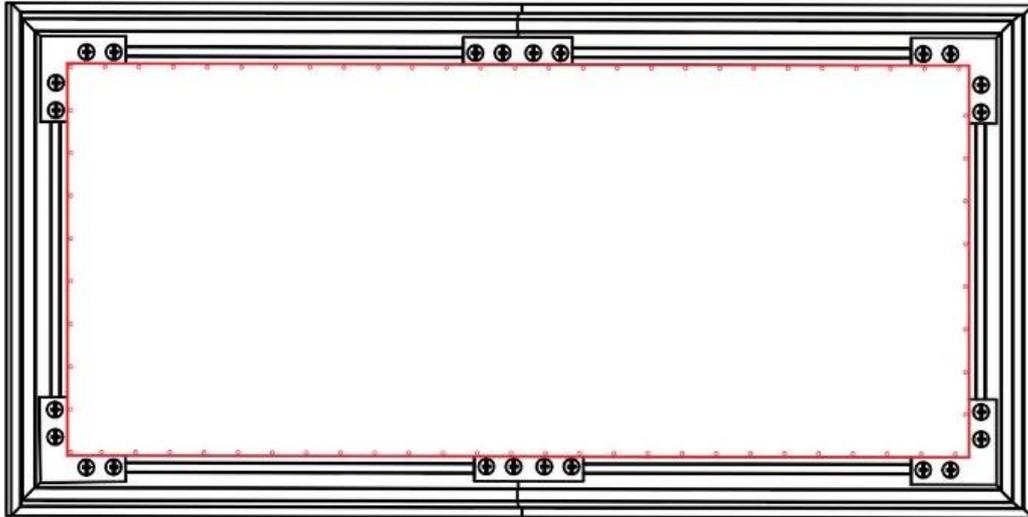


How to attach the springs


Step 8. Hook one end of the spring and secure inside the groove of the frame, use the *spring hook (i)* to attach the spring to the hole located on the screen material's outer edge in the following order.

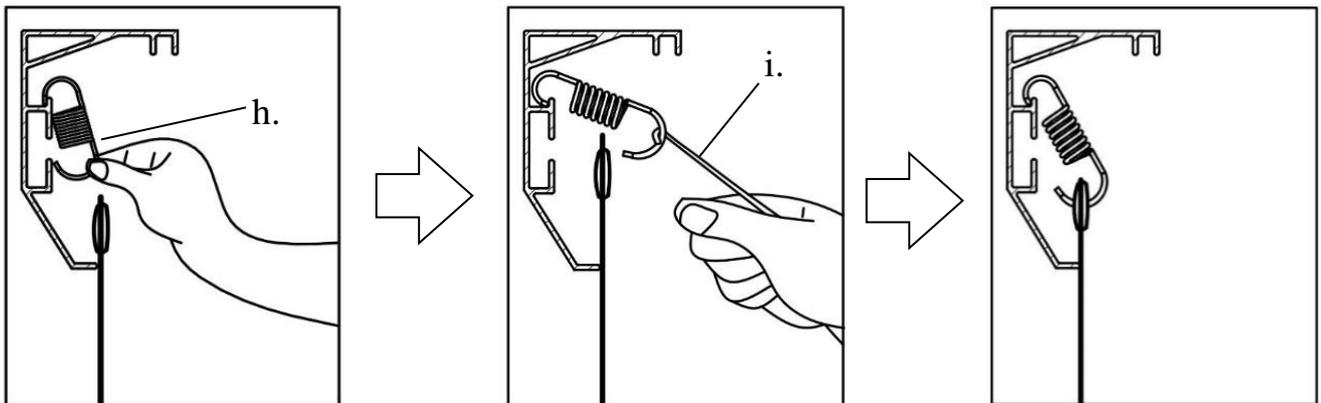

First connect on four corners, steps 1-4. make sure all four corners are fixed before proceeding with next spring.

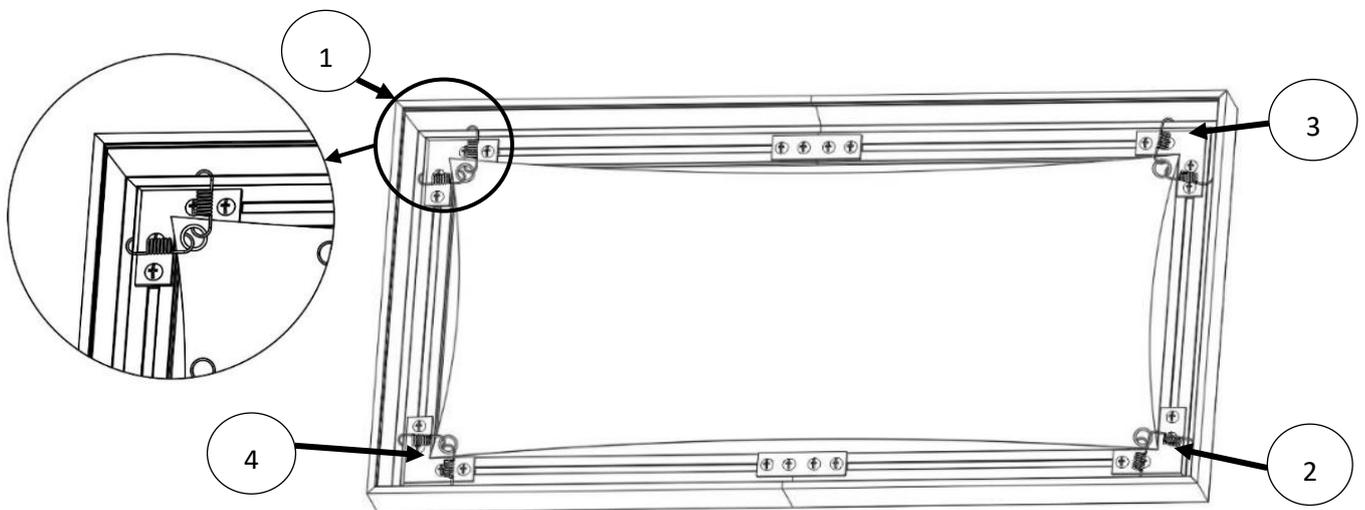


Continue to attach the remaining springs to the material in steps 5-12 in the follow order.

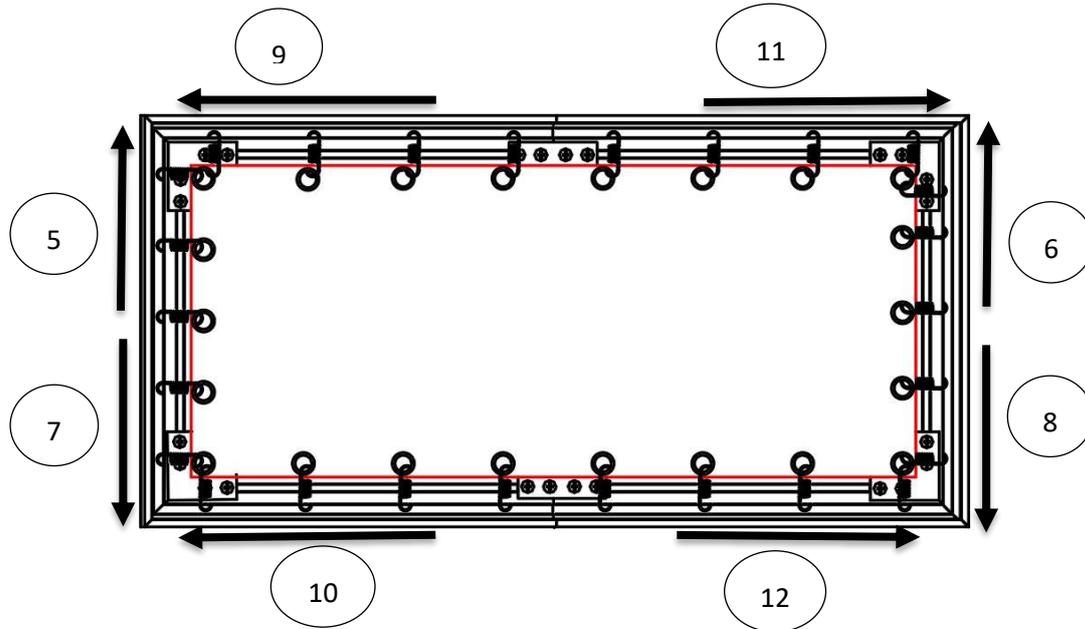


Step 9: Insert the Center Support Bar (o) into the upper top groove on the back of the frame with the bottom end near the approximate center point of the frame and rotate it in at an angle so that both ends of the bar are in alignment with the groove.

Diagonal Models 150" and below use 1 x Center Support Bar

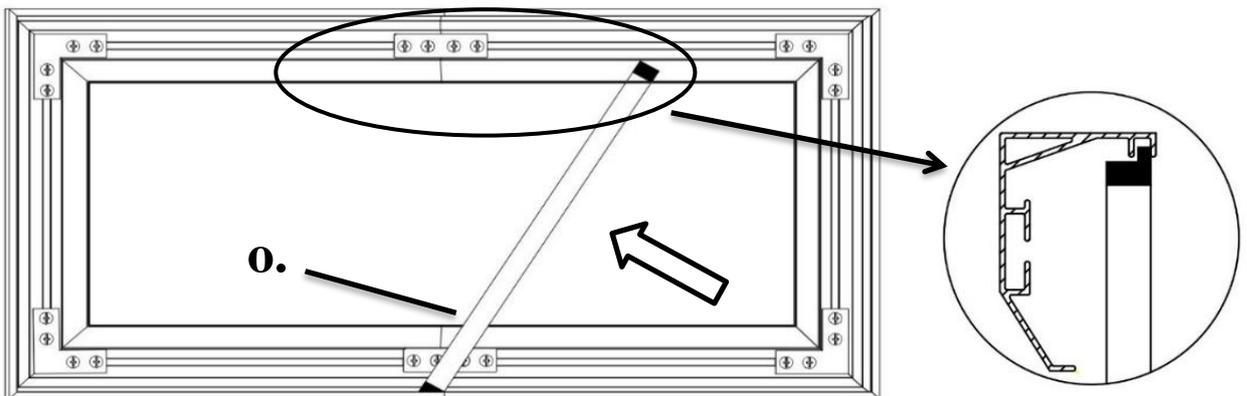

Diagonal Models above 150" require 2 x Center Support Bars

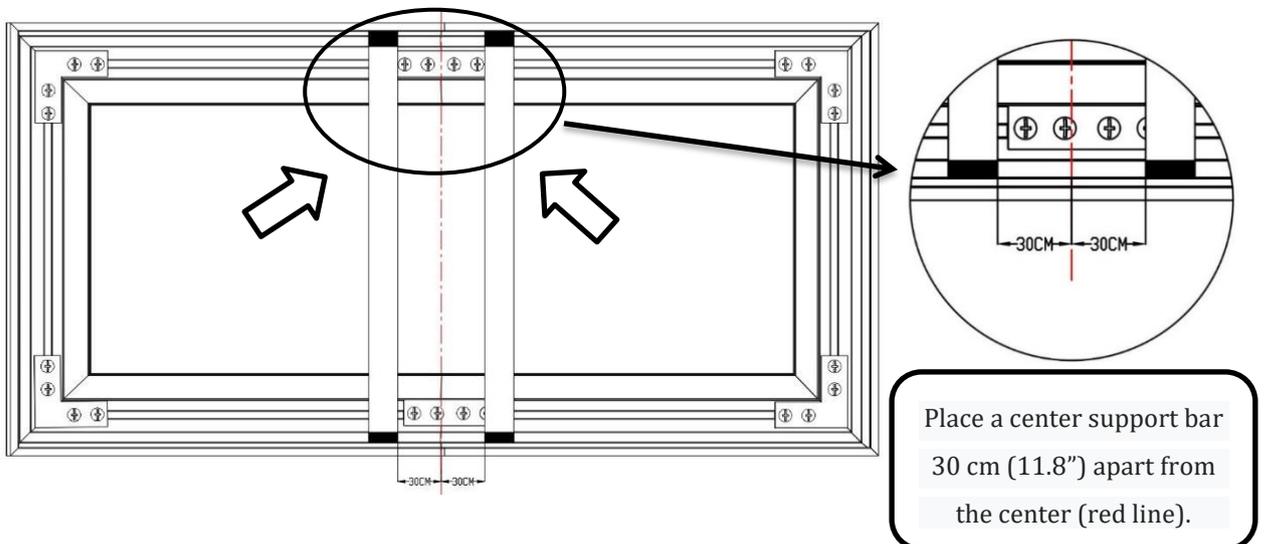

Notice to Installer:

Please use the following installation instructions to obtain superior optical performance from the CineGrey 3D/5D Angular Reflective ALR (Ambient Light Rejecting) Screen


Make sure to follow these instructions in order for the CineGrey3D/ 5D to perform correctly.

1. Ambient Light must not come from the same direction as the projector's light
2. Minimum Lens Throw Ratio of 0.8x image width.


Note: To use short-throw projectors, you will need a minimum 0.8 lens throw ratio or greater

3. Not compatible with Ultra-Short Throw Projectors

Projector Ceiling Installation: Make sure the projector (*light in*) is angled ($\Theta 1$) to reflect ($\Theta 2$) at the mirror-opposite angle (*light out*) to align with the viewer's eye level.

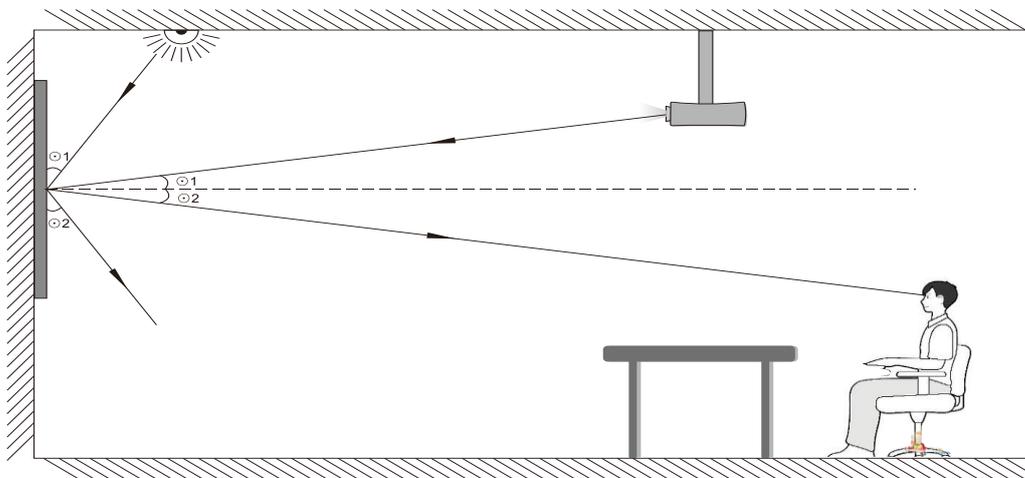

Projector Tabletop: Make sure the projector (*light in*) is angled ($\Theta 1$) to reflect ($\Theta 2$) at the mirror-opposite angle (*light out*) to align with the viewer's eye level.

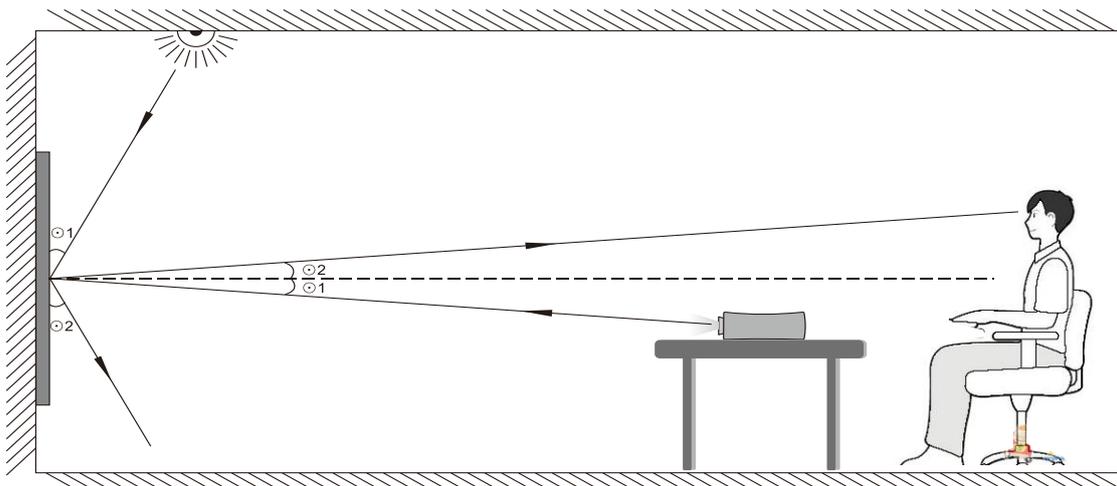


Images are not up to scale and are for illustrations purposes only.


Note: Improper installation will result in light loss and produce a dark image. This is due to the projector's light reflecting in the wrong direction.

Installation


Step 10. Measure the overall length and height of the frame and drill holes for the top brackets. Line up the wall brackets with the drilled holes on the installation location and screw them in using a Phillips screwdriver. If not installing into a structural wood stud, use a hollow wall anchor then screw in the M5x50 wood screws with a screwdriver. Make sure the brackets are leveled.

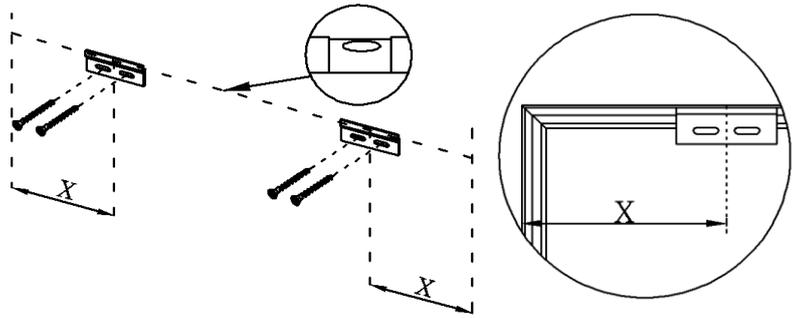

Step 11: Position the fixed frame screen onto the top wall brackets as shown below and push down at the center of the top of the frame to secure.

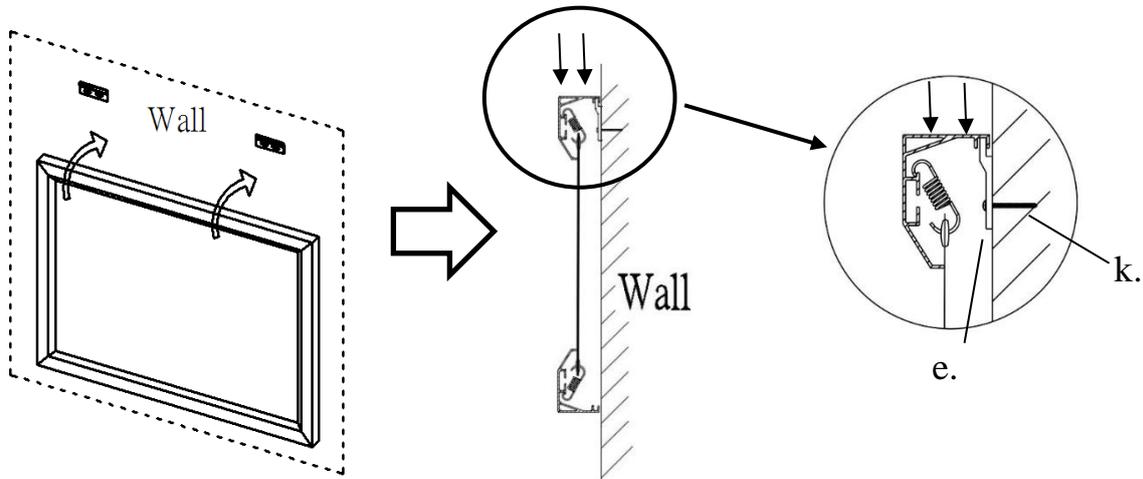

Step 12: With the frame slightly tilted outward; connect the bottom brackets onto the bottom groove of the frame. Slowly return the screen to a normal upright position. Once the screen is flush to the wall, secure the brackets to the wall with a screw. If not installing into a structural wood stud, mark the sites where the hollow wall anchors will be placed using the same instructions above. With the wood anchor installed, repeat the process and fasten the brackets with the M5x50 wood screws.

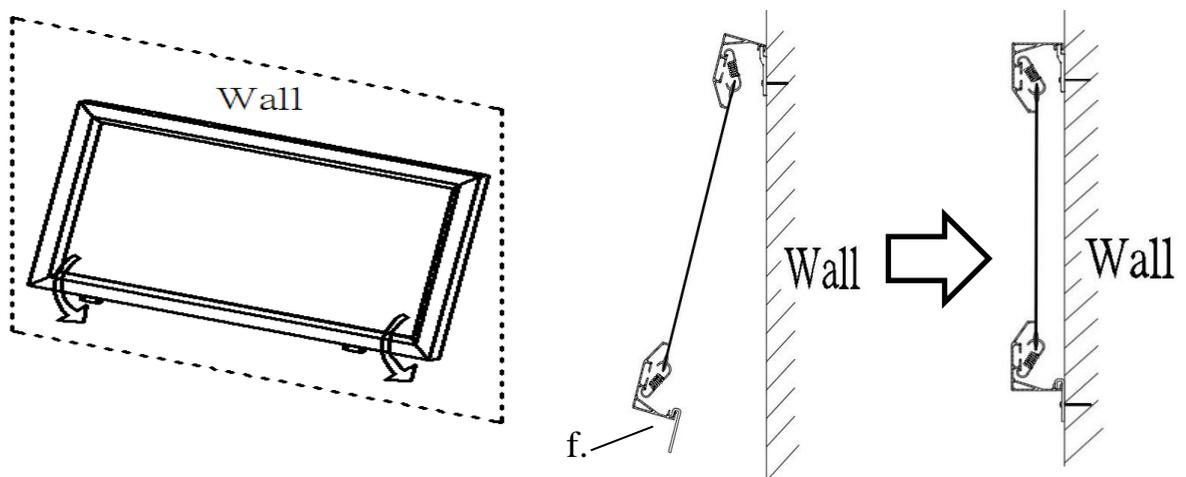

**For Technical Support or an Elite Screens contact in your area,
visit www.elitescreens.com**