

How to Repair Bottom Screen Cloth Wrinkle - Elite Screens In-Ceiling models



Step 1: Remove the two side end caps of the weight bar by prying them out with a screwdriver as seen below.



Step 2: Remove the screws that are on the back side of the weight bar as shown below.




Step 3: After removing the screws, you can slide the weight bar off.



Step 4 : Peel off some of the excess material from the tip of the rod as shown below.



Step 5: After cutting off the excess material, you can tug on it to smoothen out the material (see below three figures).

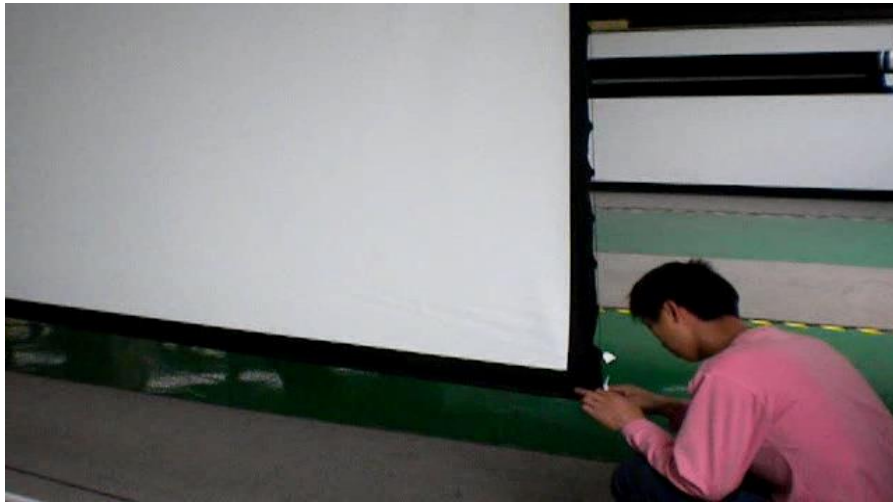


Step 6: After stretching the material, you can use a strong adhesive (crazy glue) to wrap and seal the material around the tip of the rod.



Step 7: Slide the weight bar back in to place.



Step 8: Replace the screws to secure the weight bar.

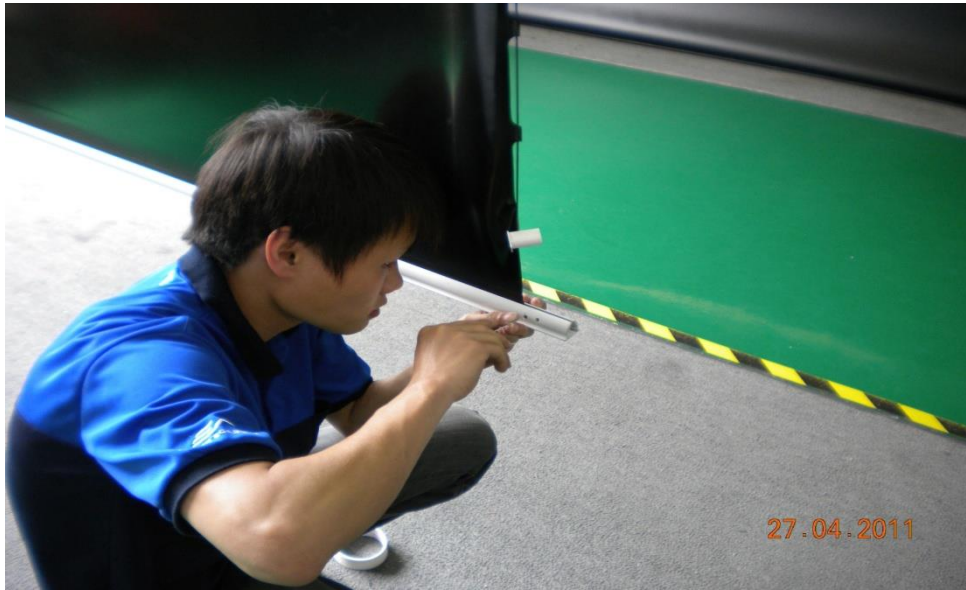

Step 9: Replace the weight bar caps by pressing them back in to place.

